



IMPORTANT FOR FUTURE REFERENCE

Please complete this information and retain this manual for the life of the equipment:


Model #: _____

Serial #: _____

Date Purchased: _____

PARTS LIST

; Ug`Hk c`7 ca dUfha Ybh7 cbj YWjcb`GhYUa Yf`cb`7 UV]bYh6 UgY
; GL!+<9`"; GL!%\$<9`

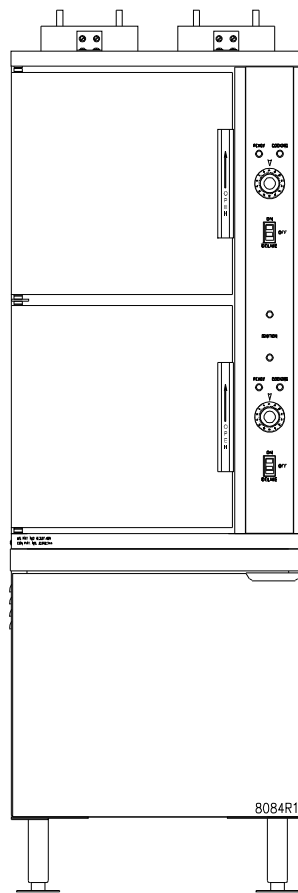

WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

CROWN FOOD SERVICE EQUIPMENT

 A Middleby Company

70 Oakdale Road, Downsview (Toronto) Ontario, Canada, M3N 1V9


Telephone: 919-762-1000 www.crownsteamgroup.com

Printed in Canada



PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE

FIGURE 1

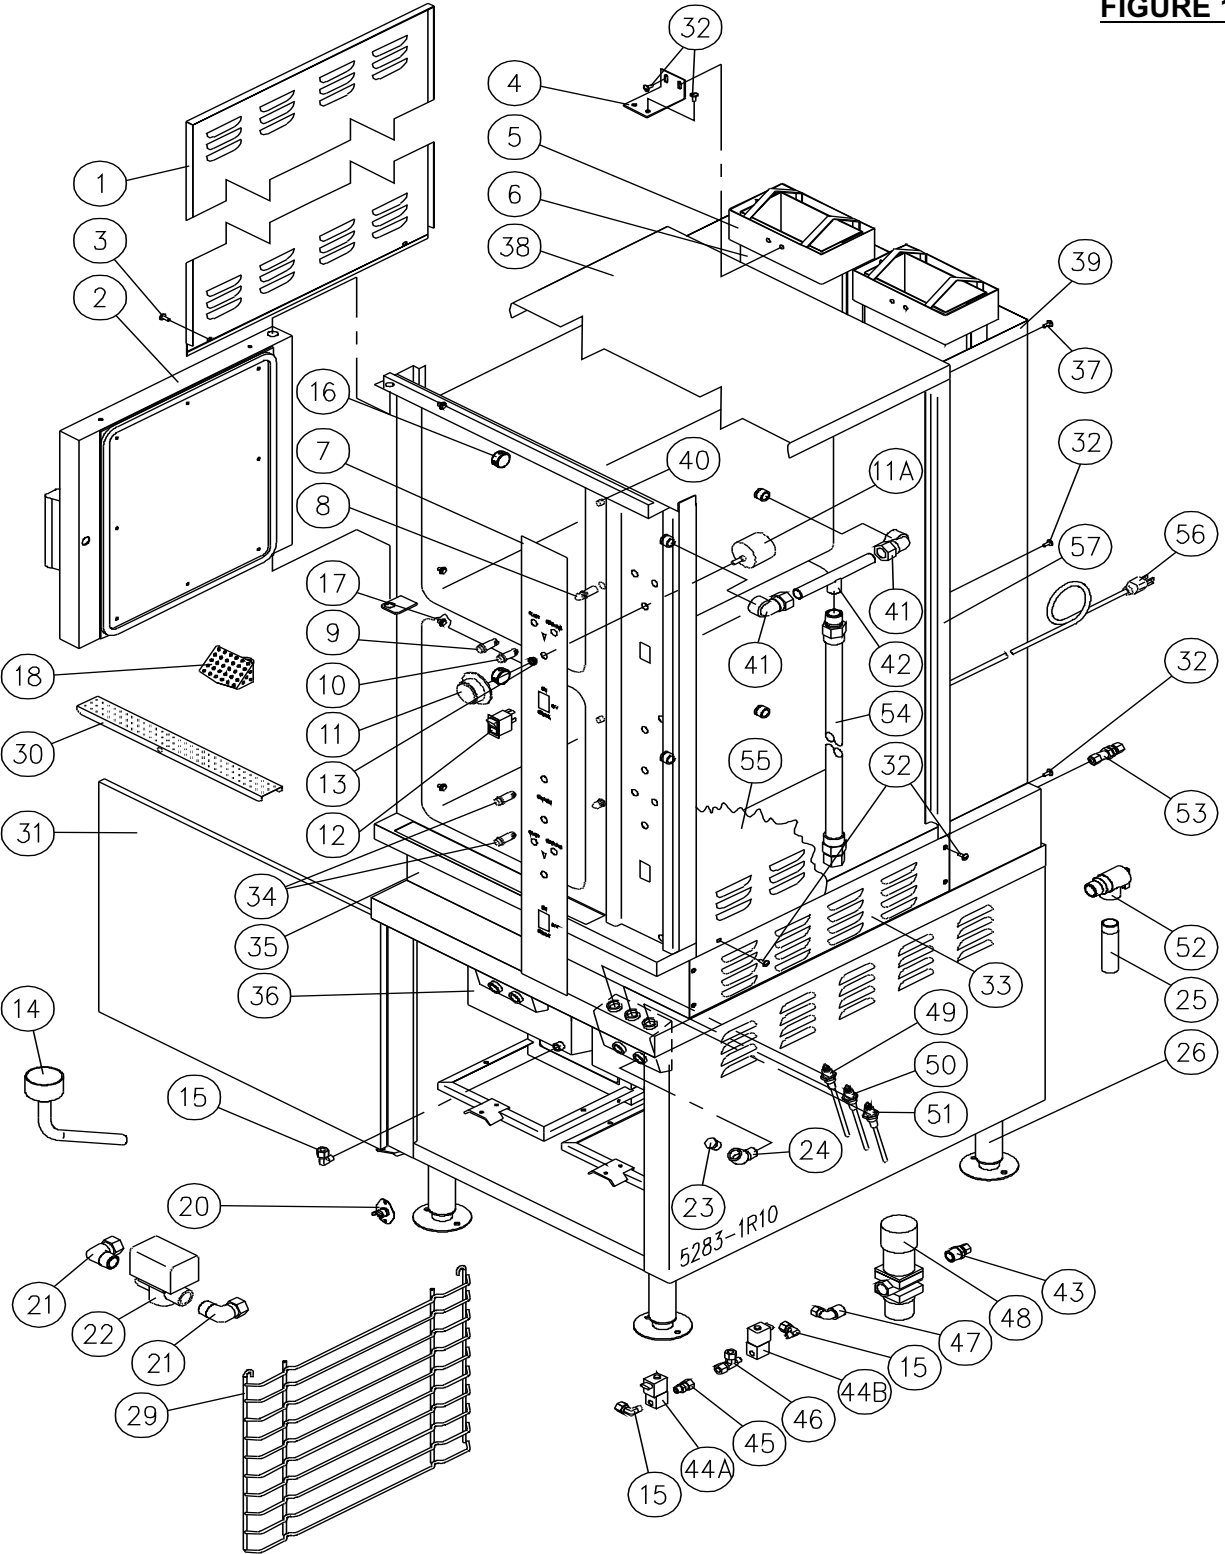

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE

FIGURE 1

<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>			
			<u>GSX-7HE</u>	<u>GSX-10HE</u>	
1.	6765-2	Left Hand Side Panel	1		
	6765-3	Left Hand Side Panel		1	
2.	8-5076-8	Door Assembly		2	
	8-5076-7	Door Assembly, Lower Compartment	1		
	8-5076-9	Door Assembly, Upper Compartment	1		
3.	M33S-1032-12	Truss HD Screw, 10 - 32 x 1/2" Stainless Steel	2	2	
4.	5116-1	Flue Support	2	2	
5.	6714-1	Flue Top	2	2	
6.	1344-1	Flue		2	
	1344-5	Flue	2		
7.	6412-1	Decal		1	
	6410-1	Decal	1		
8.	8-5021	Striker	2	2	
	8-5022	Washer Stainless Steel	2	2	
	1-90S0	Lock Washer	2	2	
	1-89S0	Hex Nut, 1/2-20 UNF, Stainless Steel	2	2	
9.	4-PL04	Pilot Light - Green (125V)	2	2	
10.	4-PL07	Pilot Light - Red	2	2	
**	11.	4-TD12	Dial 60 Hz (120 minutes)	2	2
		4104-1	Dial 60 Hz (60 minutes)	2	2
		4103-1	Dial 50 Hz (60 minutes)	2	2

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE

<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>GSX-7HE</u>	<u>GSX-10HE</u>
**	11A. 4-T210	Timer (60 minutes)	2	2
	11A. 9190-1	Timer (120 minutes) Optional	2	2
	12. 9124-2	Switch, 120V	2	2
	13. 9109-1	Rotary Shaft Seal	2	2
	14. 5288-1	Delime Funnel	1	1
	15. 3-696A	Elbow, 3/8" Copper x 1/8" MPT	4	4
	16. 5281-1	Steam Diverters	4	8
	17. 4721-1	Rack Hanger Assembly	12	12
	18. 5224-2	Compartment Strainer	2	2
*	19. 3-U6BE	Union Elbow, 3/4 NPT	2	2
	20. 4874-3	High Limit Thermostat	2	2
*	5299-2	High Limit Thermostat Cover	2	2
	21. 3-6912E	Elbow - Blowdown 3/4" C x 3/4" MPT	4	4
	22. 3-S543	Blowdown Valve 3/4" C x 3/4" FPT	2	2
	23. 3-121C	Brass Plug, 3/8" MPT	2	2
	24. 3-124C	45° Brass St. Elbow, 3/8" MPT	2	2
	25. 5784-1	Relief Valve Extension	2	2
	26. 5379-1	Flanged Leg Assembly, 6"	4	4
*	27. 5381-1	Swivel Caster 5" c/w Brake Optional	2	2
*	28. 5382-1	Swivel Caster 5", Optional	2	2
	29. 2681-1	Pan Rack, 3 Pan	2	
	2681-3	Pan Rack, 5 Pan		4
	2681-2	Pan Rack, 4 Pan	2	

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE

<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>GSX-7HE</u>	<u>GSX-10HE</u>
30.	8-5023	Perforated Trough	1	1
31.	5421-1	Cabinet Door Assembly	1	1
32.	M33S-1032-12	Truss HD Screw 10 - 32 x 1/2"	28	20
33.	2859-1	Side Riser Panel	2	
34.	4-PL04-2	Pilot Light - Green, 28V	2	2
35.	6768-1	Front Riser Panel	1	
36.	0672-2	Generator Tank	2	2
37.	M23S-1420-12	Binding Screw, 1/4 - 20 x 1/2"	2	2
38.	8-5108	Top Panel	1	1
39.	5420-1	Flue Cover		1
	5420-3	Flue Cover	1	
40.	9-3213	Door Switch	2	2
	9-3336	Actuator Pin complete with Clip	2	2
*	41. 3-7012E	Elbow, 3/4"C x 3/4" FPT	8	8
	42. 5282-1	Steam Manifold	4	4
	43. 3-686D	Connector, 3/8" C x 1/2" MPT	1	1
	44A. 5162-1	Generator Fill Solenoid, Upper Cavity	1	1
	44B. 5162-1	Generator Fill Solenoid, Lower Cavity	1	1
	45. 3-686A	Connector, 3/8" C x 1/8" MPT	1	1
	46. 3-716A	Tee, 3/8 C x 3/8" C x 1/8" MPT	1	1
	47. 3-696D	Elbow, 3/8" C x 1/2" MPT	1	1
	48. 5444-1	Thermostatic Cooling Valve	1	1
*	48. 5376-1	Cooling Valve Bracket	1	1

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE


<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>GSX-7HE</u>	<u>GSX-10HE</u>	
49.	3738-10	Probe, 2 inches	2	2	
50.	3738-11	Probe, 2-1/2 inches	2	2	
51.	3738-12	Probe, 3 inches	2	2	
52.	5286-1	Relief Valve, 5 psi	2	2	
53.	3-776	Water Fill - Bulk Head, 3/8" C.	2	2	
**	54.	9083-18	Bottom Left, Flex Steam Tube, 18"	1	1
		9083-30	Bottom Right, Flex Steam Tube, 30"	1	1
		9083-48	Top Left Flex Steam Tube, 48"	1	1
		9083-36	Top Right Flex Steam Tube, 36"	1	1
55.	6765-3	Right Hand Side Panel		1	
	6765-2	Right Hand Side Panel	1		
56.	4127-3	Cord Set, 120V	1	1	
**	57.	8140-1	Back Panel	1	
		8141-1	Back Panel		1
*	58.	7156-1	Drain Box Assembly	1	1
*	59.	3-6812E	Connector - Drain, 3/4C" x 3/4" MPT	4	4

* NOT SHOWN.

** SELECT AS REQUIRED.

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE

FIGURE 2

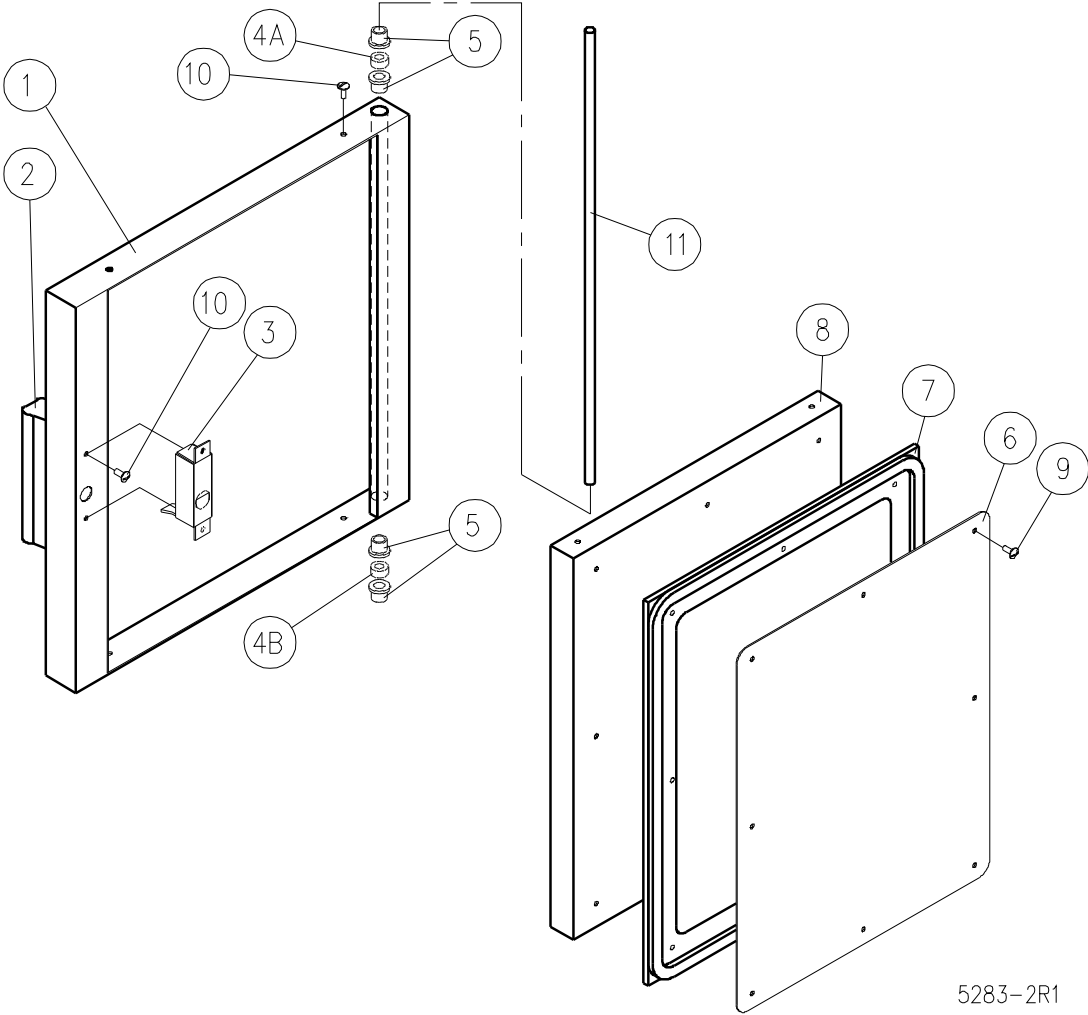

5283-2R1

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE


FIGURE 2

<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>GSX-7HE</u>	<u>GSX-10HE</u>
1.	8-5060-7	Door Frame, Bottom	1	
	8-5060-8	Door Frame, (2840)		2
	8-5060-9	Door Frame, Top	1	
2.	3903-2	Door Handle Assembly	2	2
*	3646-1	Decal	2	2
3.	8-5068-9	Latch Assembly	2	2
4A.	5716-1	Spacer - Upper	2	2
4B.	5717-1	Spacer - Lower	2	2
5.	8-5078	Door Bushing	8	8
6.	8-5064-7	Gasket Plate, Bottom	1	
	8-5064-8	Gasket Plate,		2
	8-5064-9	Gasket Plate, Top	1	
7.	8-5063-8	Gasket		2
	8-5063-7	Gasket, Bottom	1	
	8-5063-9	Gasket, Top	1	
8.	8-5065-7	Door Panel, Bottom	1	
	8-5065-8	Door Panel		2
	8-5065-9	Door Panel, Top	1	
9.	9-1011-1	Special Screw, 10 - 32 x 1/2"	16	16
10.	M33S-1032-12	Truss HD Screw, 10 - 32 x 1/2"	12	12
11.	8-5101-5	Hinge Rod		1
	3977-1	Hinge Rod	1	

* NOT SHOWN.

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE

FIGURE 3

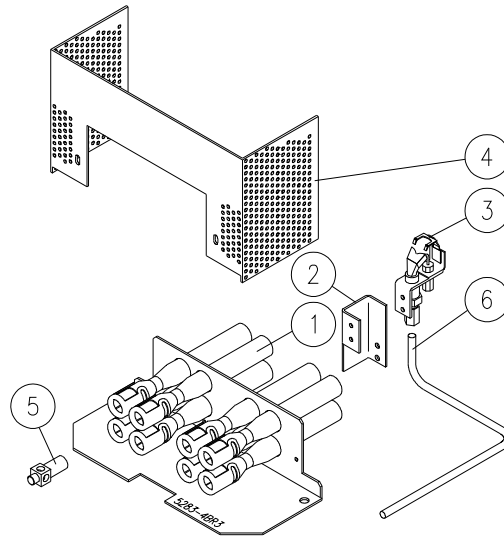


BURNER PARTS

<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>7HE</u>	<u>10HE</u>
1.	7283-1	Burner Assembly	2	2
2.	5861-1	Pilot Bracket	2	2
**	3.	5171-024 Pilot Burner, Natural Gas	2	2
		5171-016 Pilot Burner, Propane Gas	2	2
4.	5593-1	Burner Cover	2	2
**	5.	4951-52 Orifice Jet, Natural Gas, #52		16
		4951-53 Orifice Jet, Natural Gas, #53, Lower Compartment	8	
		4951-55 Orifice Jet, Natural Gas, #55, Upper Compartment	8	
		4951-61 Orifice Jet, Propane Gas, #61		16
		4951-64 Orifice Jet, Propane Gas, #64, Lower Compartment	8	
		4951-67 Orifice Jet, Propane Gas, #67, Upper Compartment	8	
6.	6310-1	Pilot Burner Tube	1	1

** SELECT AS REQUIRED.

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE

FIGURE 4

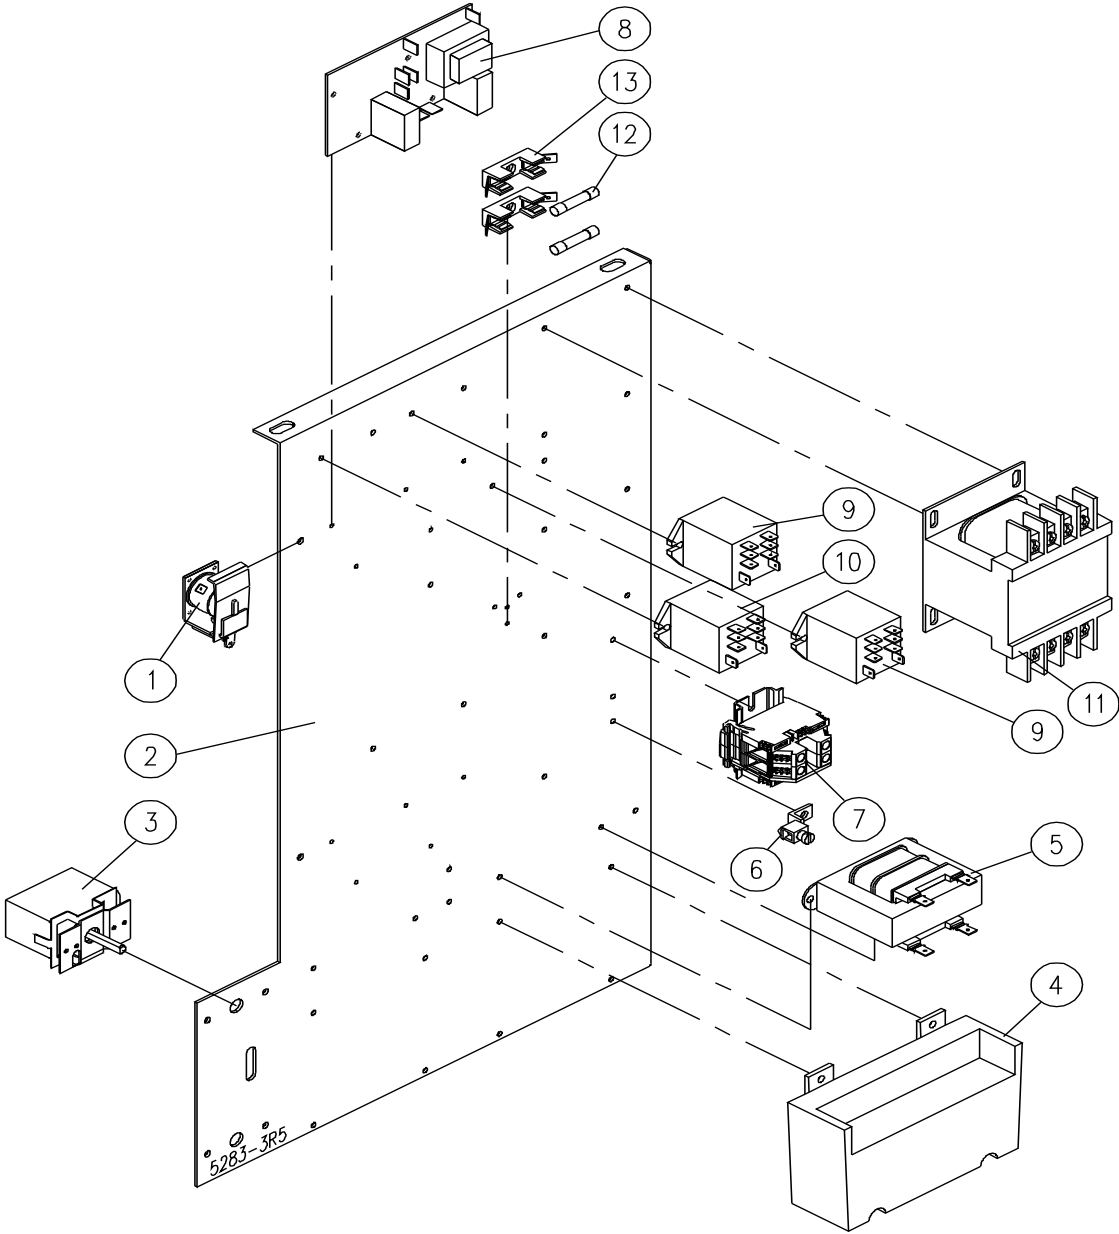

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE

FIGURE 4


<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>7HE</u>	<u>10HE</u>
1.	3821-1	Buzzer, 120V	2	2
2.	7926-1	Component Mounting Board	1	1
3.	9126-1	Operating Thermostat	2	2
4.	9210-2	Ignition Module, Intermittent Pilot	2	2
5.	9-3383	Transformer, 120V - 24V	2	2
6.	4-35EU	Ground Lug	1	1
7.	9390-2	Modular Terminal Assembly, 2 Poles	1	1
		Includes the following parts:		
	9391-1	Modular Terminal	2	2
	9392-1	End Plate	1	1
	9393-1	End Clamp	2	2
	9394-053	Mounting Rail, 53 mm	1	1
** 8.	4038-4	Level Control Board, 10 K OHM, 120V	2	2
	5230-1	Level Control Board, 1 M OHM, 120V	4	4
9.	9332-1	Relay, DPDT, 120V (Single Pole In Use)	4	4
10.	9332-1	Relay, DPDT, 120V	2	2
11.	4-T265	Transformer, 220/480V - 120V, 50/60 Hz	2	2
** 12.	9092-2	Glass Fuse, 2 amp, 120V	2	2
	9092-1	Glass Fuse, 1 Amp. 220V	2	2
13.	9068-1	Fuse Holder	2	2

** SELECT AS REQUIRED.

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE

GSX-7HE

FIGURE 5

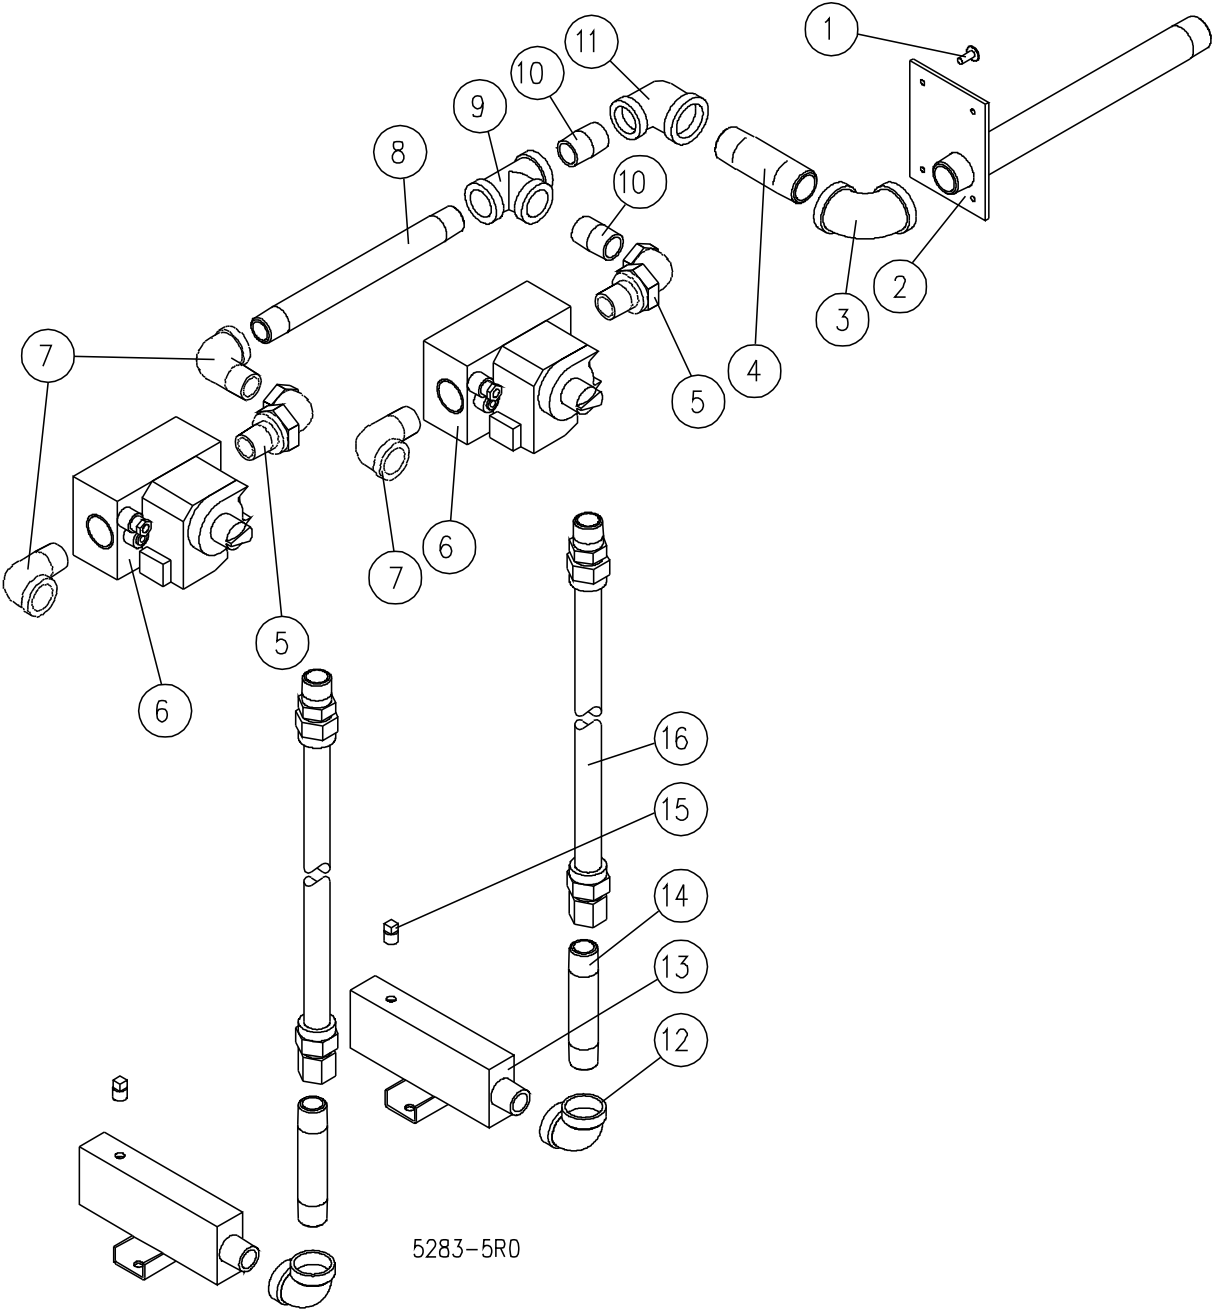

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE

GSX-7HE

FIGURE 5


<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY</u>
1.	M23C-1032-12	Binding Screw, 10 - 32 x 1/2" Lg.	4
2.	5233-1	Gas Supply Pipe, 3/4" x 9 - 13/16"	1
3.	9011-4	Elbow, 3/4"	1
4.	9010-030	Nipple, 3/4" x 3"	1
5.	3-U4BE	Union Elbow, 1/2"	2
** 6.	5450-1	Combination Control, Natural Gas	2
	5450-2	Combination Control, LP	2
7.	9012-3	Street Elbow, 1/2"	3
8.	9009-076	Nipple, 1/2" x 7 - 3/4"	1
9.	9013-3	Tee, 1/2"	1
10.	9009-000	Close Nipple, 1/2"	2
11.	9014-1	Reducing Elbow, 1/2" x 3/4"	1
12.	9011-3	Elbow, 90, 1/2" NPT	2
13.	7280-1	Manifold Assembly	2
14.	9009-050	Nipple, 1/2" x 5"	2
15.	3-109C	Square Head Pipe Plug, 1/8" MPT	2
16.	9026-18	Gas Flex Tube, 1/2" x 18"	2

** SELECT AS REQUIRED.

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE

GSX-10HE

FIGURE 6

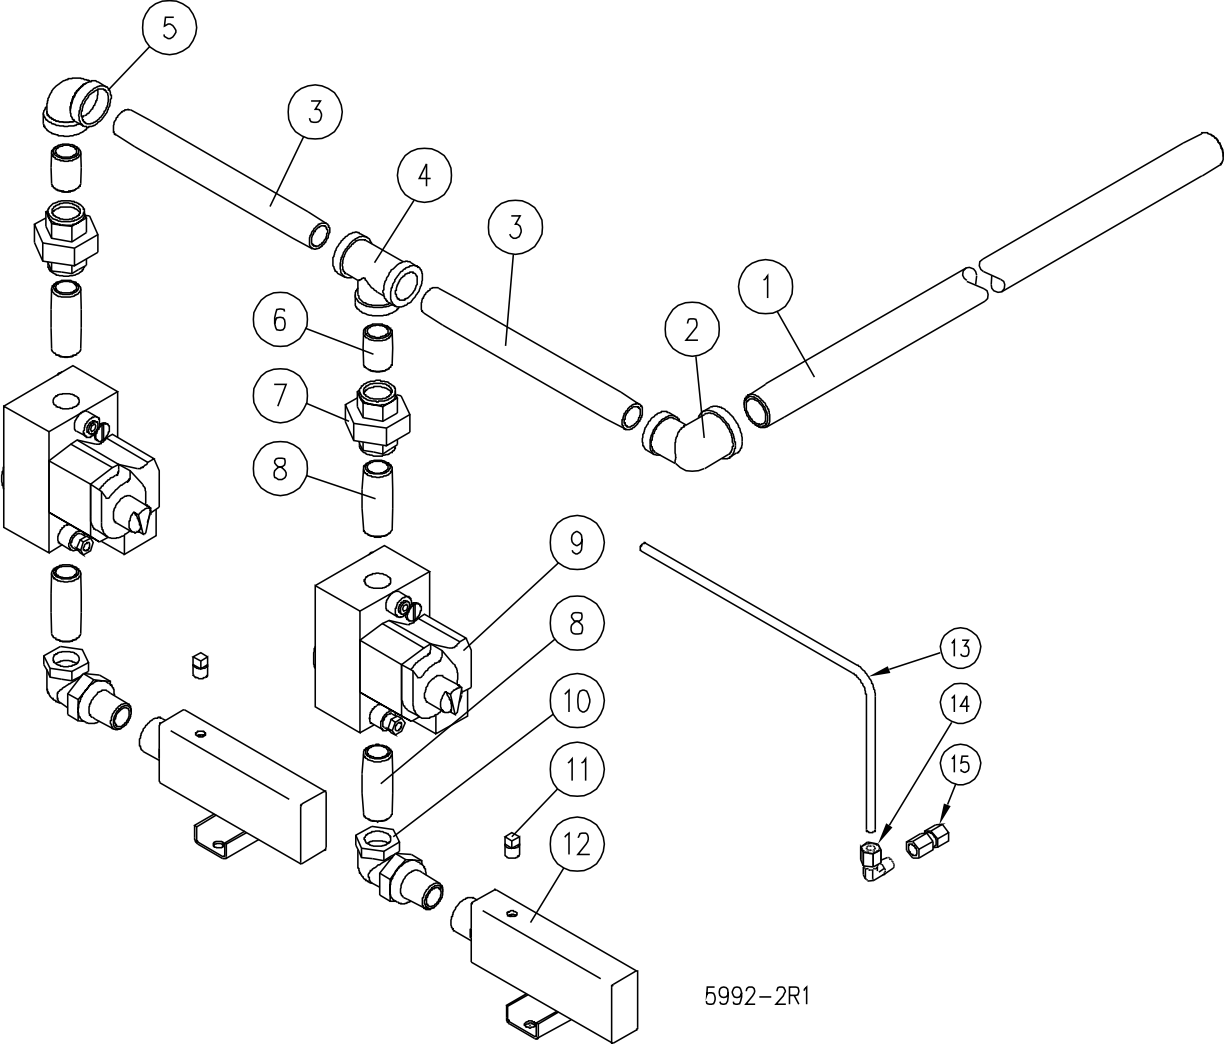

PARTS LIST, PRESSURELESS COOKER, MODELS GSX-7HE, GSX-10HE

FIGURE 6

GSX-10HE

<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY</u>
1.	9010-320	Nipple, 3/4 NPT x 32 Lg.	1
2.	9014-1	Reducing Elbow, 150#, 1/2 NPT x 3/4 NPT	1
3.	9009-094	Nipple, 1/2 NPT x 9-1/2 LG.	2
4.	9013-3	Tee, 150#, 1/2 NPT	1
5.	9011-3	Elbow, 90°, 150#, 1/2 NPT	1
6.	9009-000	Close Nipple, 1/2 NPT	2
7.	9015-3	Union, 150#, 1/2 NPT	2
8.	9009-020	Nipple, 1/2 NPT x 2 LG.	4
** 9.	5450-1	Combination Control Valve, N.G.	2
	5450-2	Combination Control Valve, LP	2
10.	3-U4BE	Union Elbow, 1/2 NPT	2
11.	3-109C	Sq. Head Pipe Plug, 1/8 MPT	2
12.	8083-1	Manifold Assembly	2
13.	6309-1	Pilot Tube	2
14.	3-694A	Brass Elbow, 1/4 C x 1/8 MPT	2
15.	3-664A	Brass Connector, 1/4 C x 1/8 MPT	2

** SELECT AS REQUIRED.