



# Soda Gun Jetter Smart controller setup guide

# Contents

Menu navigation – Devices

Menu navigation - Templates

Menu navigation - Settings



Update firmware

Taste   
Symbol

**Say Soda Gun Jetter and Be Sure**

# Menu navigation- Device

Search for new devices

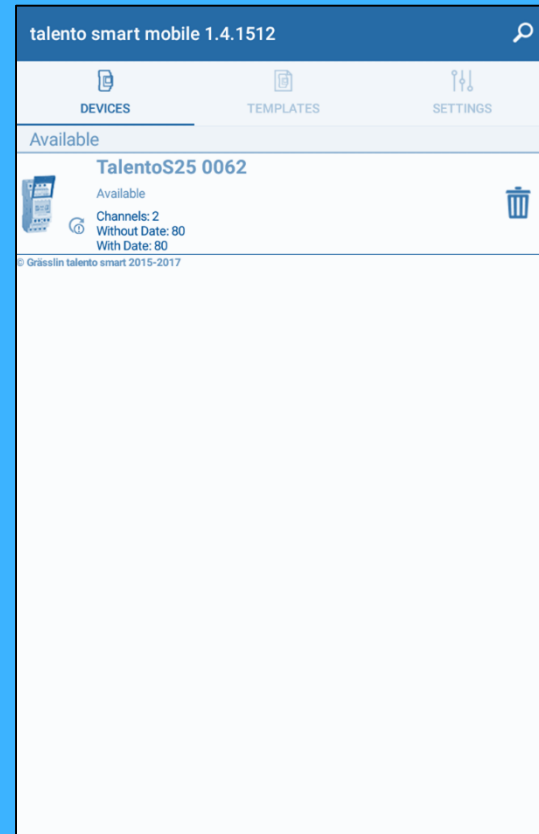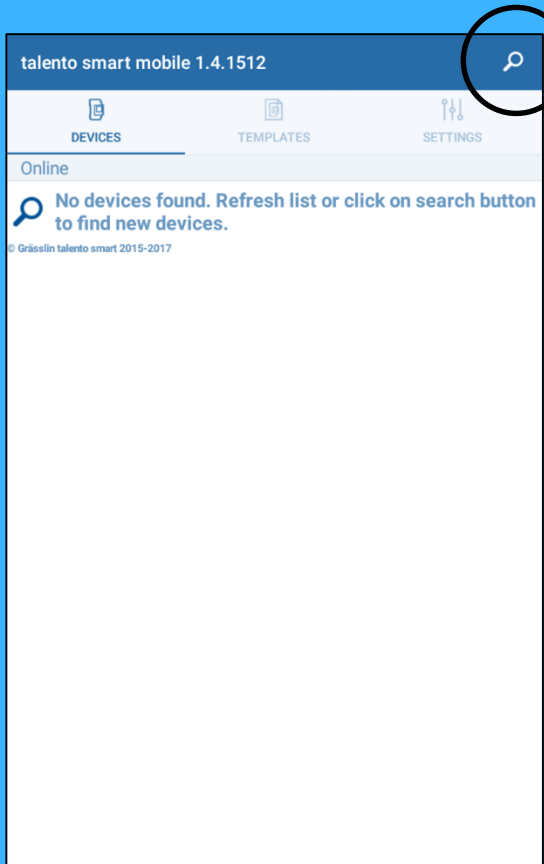

Search for available devices by tapping the magnifying glass



Search for Devices



Timer synchronized



Timer needs to be synchronized



Erase device

# Devices

Overview of the symbols



Device is connected



Device is disconnected



Settings



Timer needs to be synchronized



Timer synchronized



Schedule



Table



Auto mode



Override



Fix on




Fix off

Select an available timer to get to the manual control.

# Devices

Overview of programs and functions

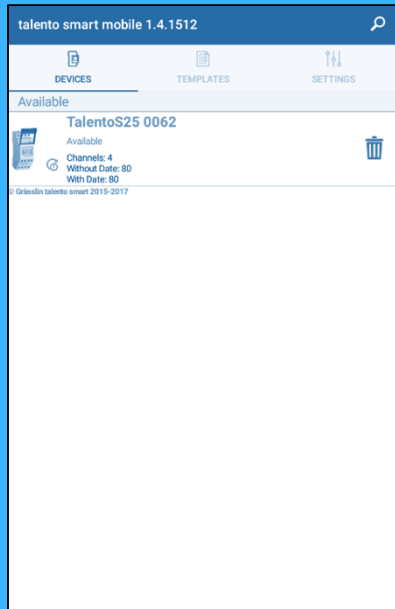


Here you will see all the information regarding the timer.

Tap here to see and adjust timer programs.


Buttons for manual control / override of timer circuits.

# Devices


## Change of settings

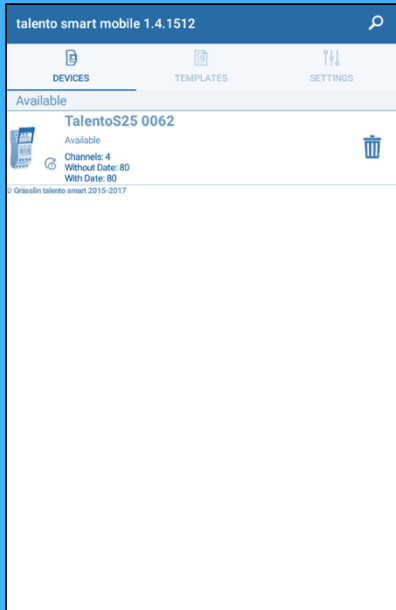

Tap the gear symbol to access timer settings.

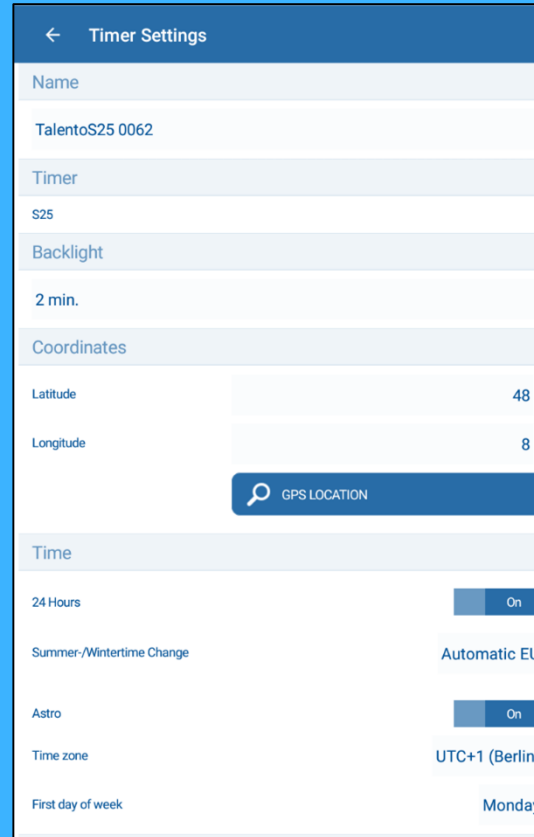


This gives you access to name / rename timers and channels, set latitude / longitude coordinates, time tone, etc..

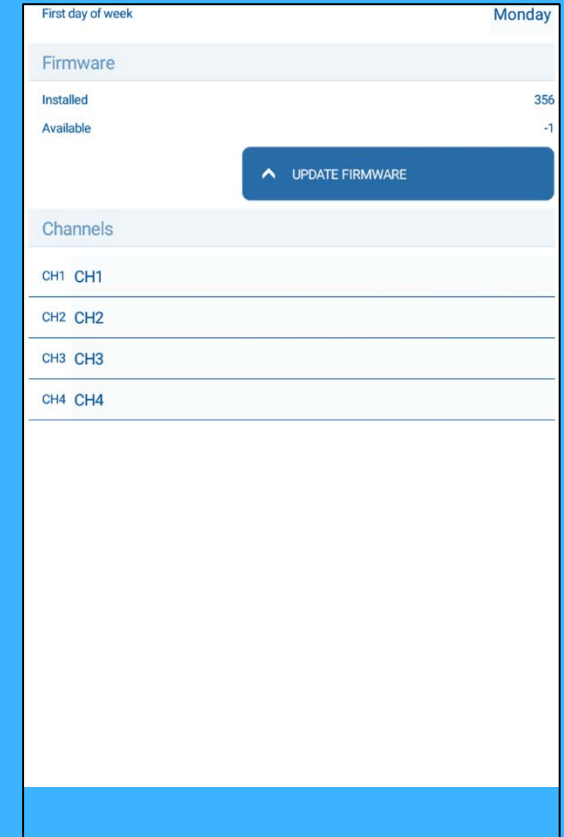


# Devices

## Synchronization

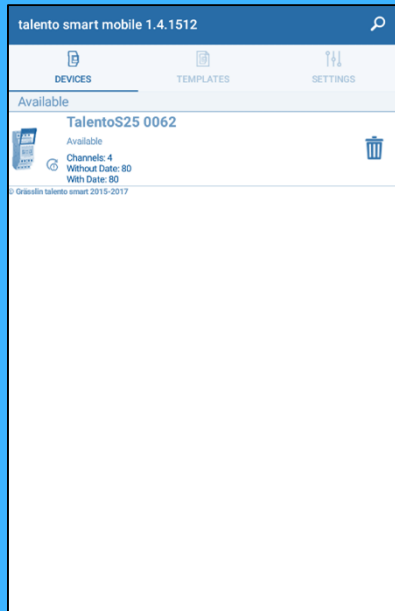

Tap the connection button to access the synchronization menu.

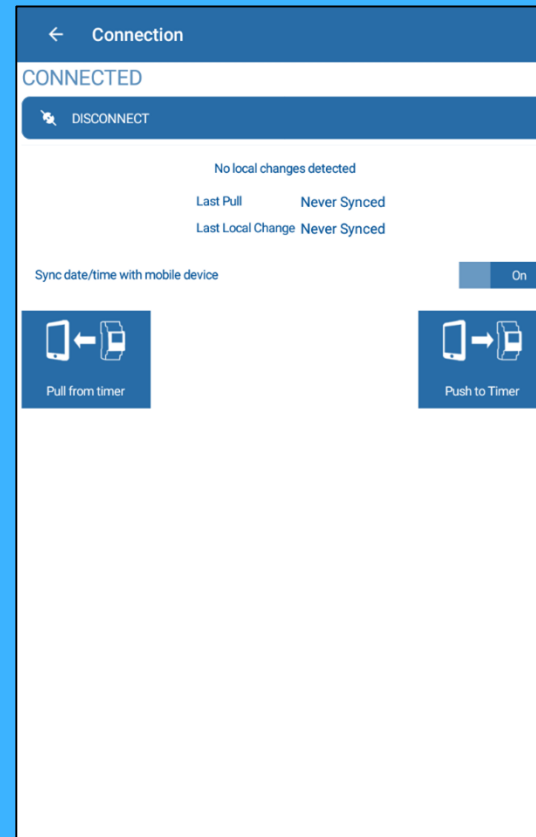


Tap on Pull From Timer to load the schedule from the timer.



Device is connected



Device is disconnected

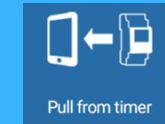



Pull program from the time switch




Send program to the time switch

# Devices


## Schedule

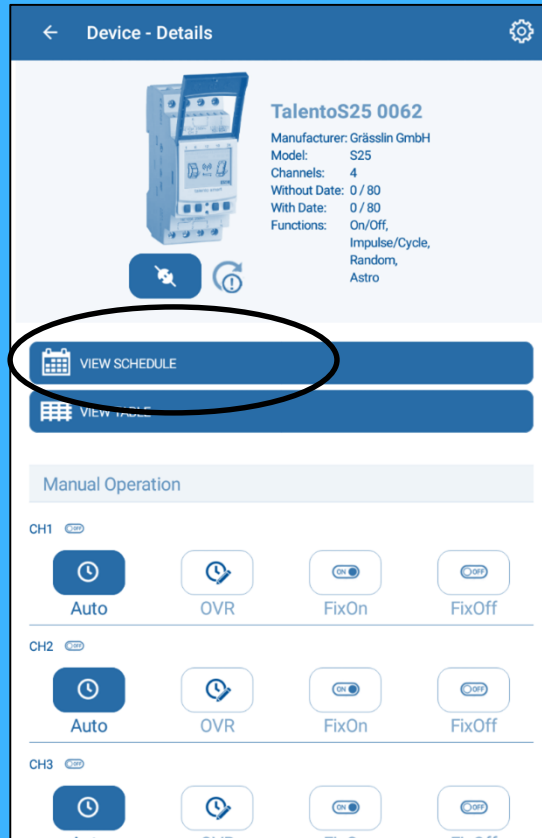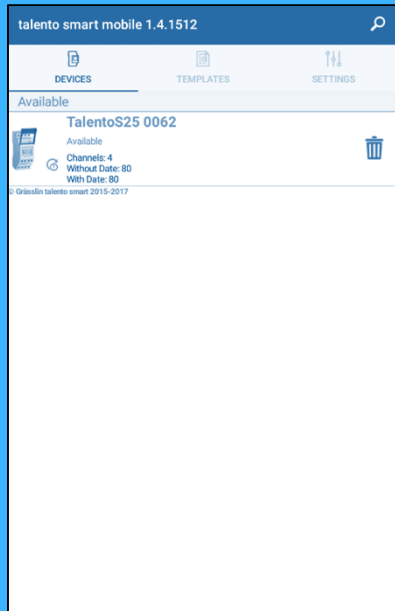

Tap the View Schedule bar to see the timer schedule.

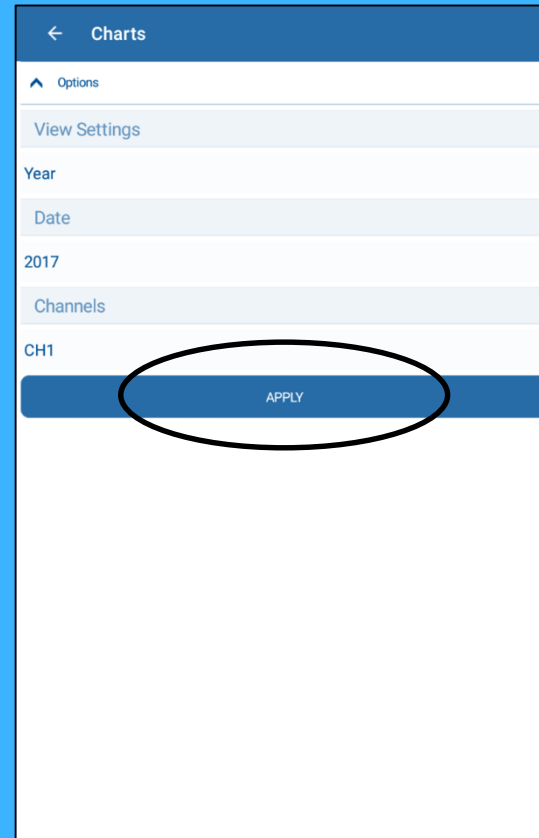

Tap on the parameter you want to see, then tap on Apply to confirm your choice.


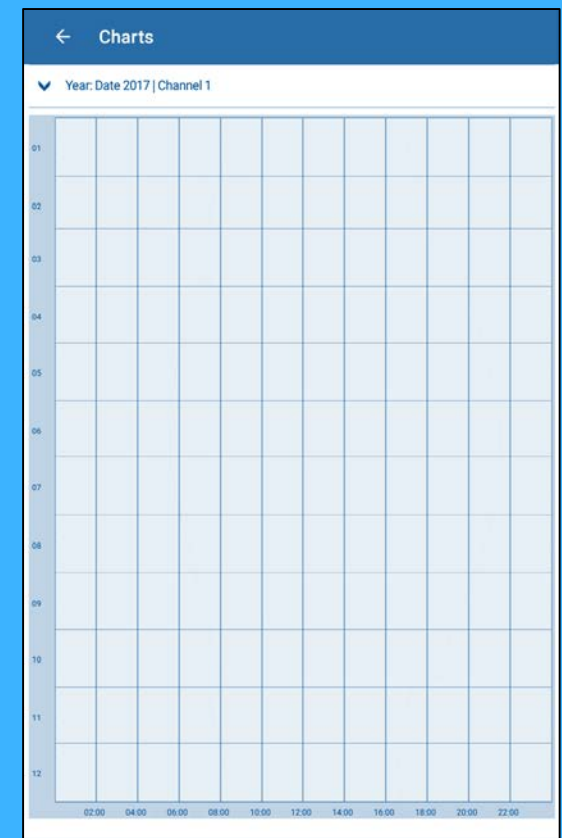


A graph of selected information will be displayed.




# Devices


Time table – create new program

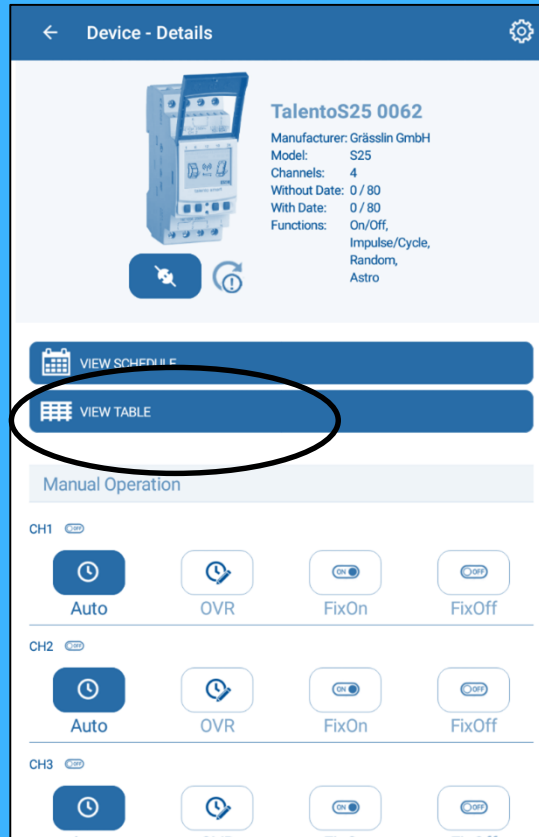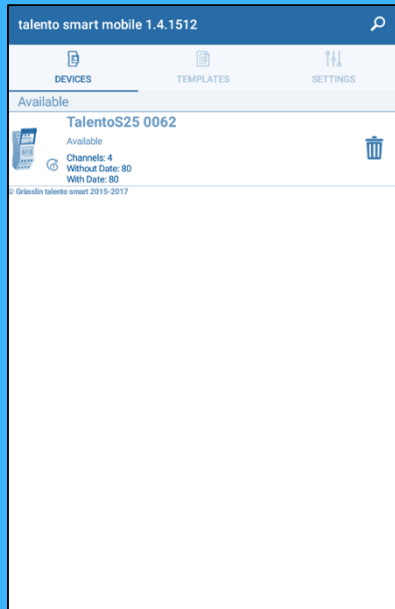

Tap on View Table to access the program schedule. Here you can add programs and events.

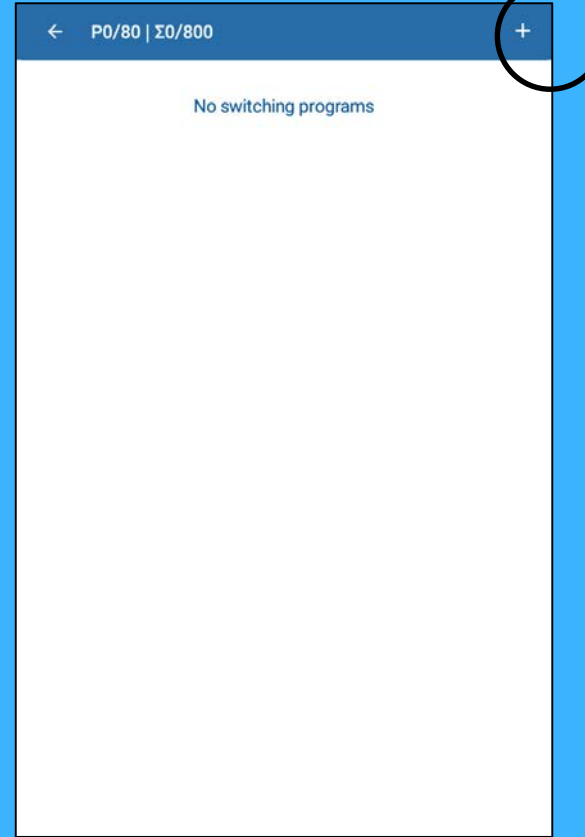

To create a new program tap on +.

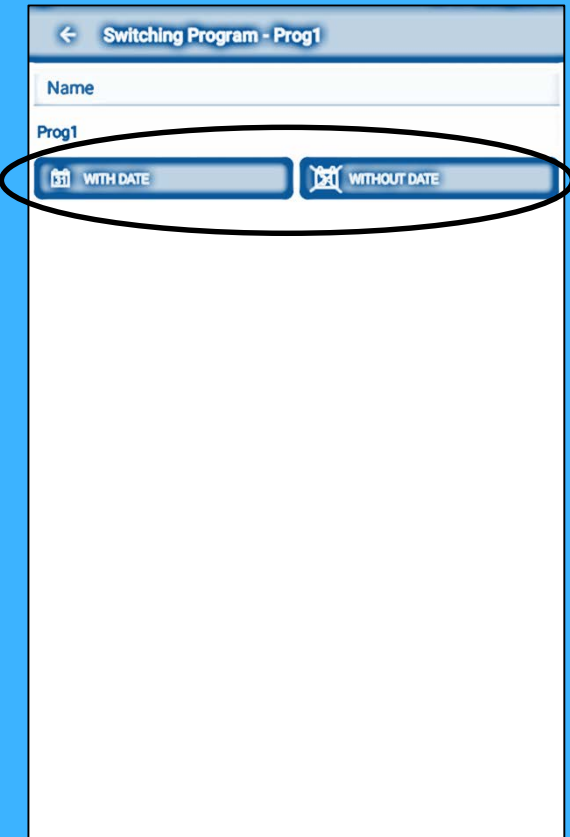

Program can be named / renamed. The select with date for holiday settings or without date for regular schedule event.

# Holiday function is not used but included if needed

Time table – create new program





The screenshot shows the 'Date Range Input' screen. At the top, there is a 'HOLIDAYS' section with a calendar icon, which is circled in black. Below this, there are 'Start' and 'End' date pickers. The 'Start' date is set to 25/10/2017 and the 'End' date is also set to 25/10/2017.

Enter your holiday date range.

The screenshot shows the 'Holiday Wizard' screen. It has sections for 'Date Ranges' (From: 2017, To: 2017) and 'Country' (Choose country: United Kingdom). Below these are three buttons: 'ALL', 'FIXED', and 'FLOATING'. A list of preset holiday dates is shown, including New Year's Day (01.01.\*\*\*\*), Good Friday (14.04.2017), Easter Sunday (16.04.2017), Easter Monday (17.04.2017), May Day Bank Holiday (01.05.2017), Spring Bank Holiday (29.05.2017), Summer Bank Holiday (28.08.2017), and Christmas Day (25.12.\*\*\*\*).


Select Holidays to choose from preset holiday dates. Tap the disk icon to save and exit or the icon with the plus symbol to save and add another holiday. Notification at the top of the screen will indicate when the holiday is saved.

The screenshot shows the 'Date Range Input' screen after a holiday has been added. A notification 'Holidays added' is displayed at the top, circled in black. Below it, the 'Start' and 'End' date pickers are visible, both set to 25/10/2017.


-  Save + add more data
-  Save + end
-  Select holidays

# Devices

## Time table - overview

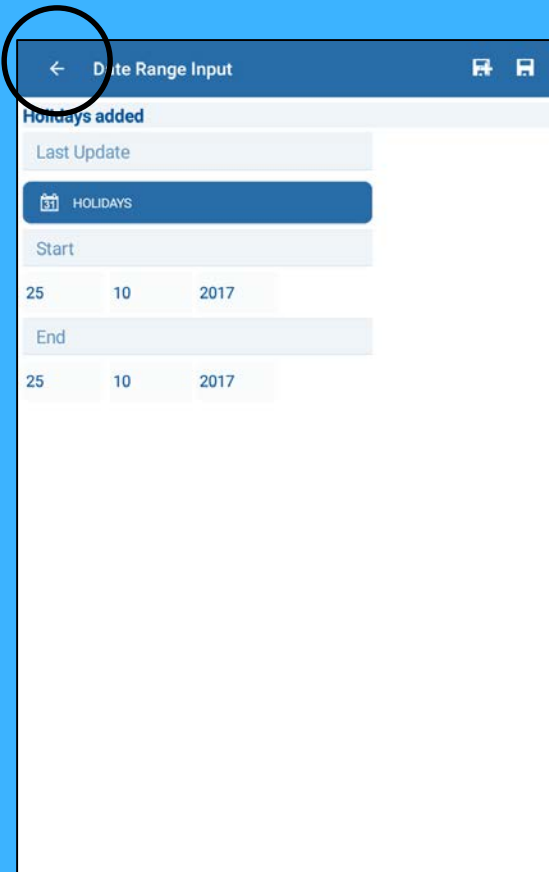

Tapping the back arrow will take you back to the time table.

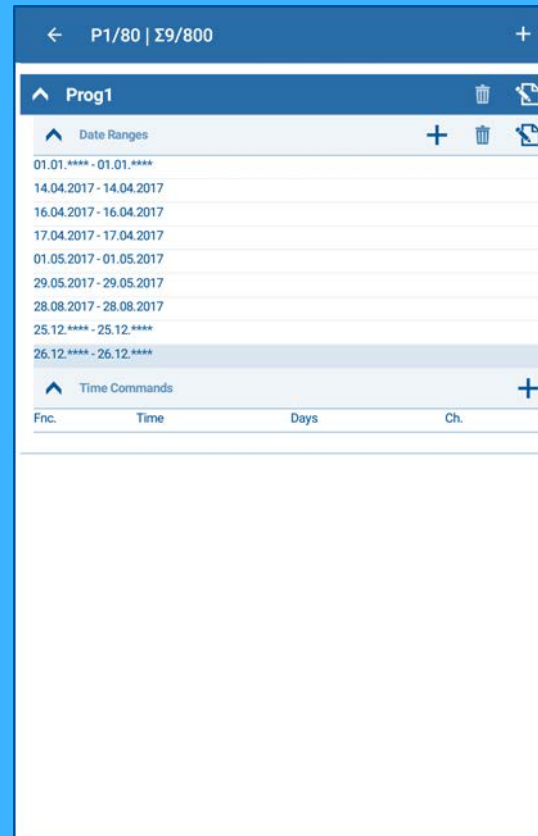


Overview of Dates + date range

Overview of Time commands

 Go back

 Close detailed view

 Open detailed view


 Add program, date range or time command

 Change settings


 Erase data

# Devices

Time table – Adjust program priority / rename program

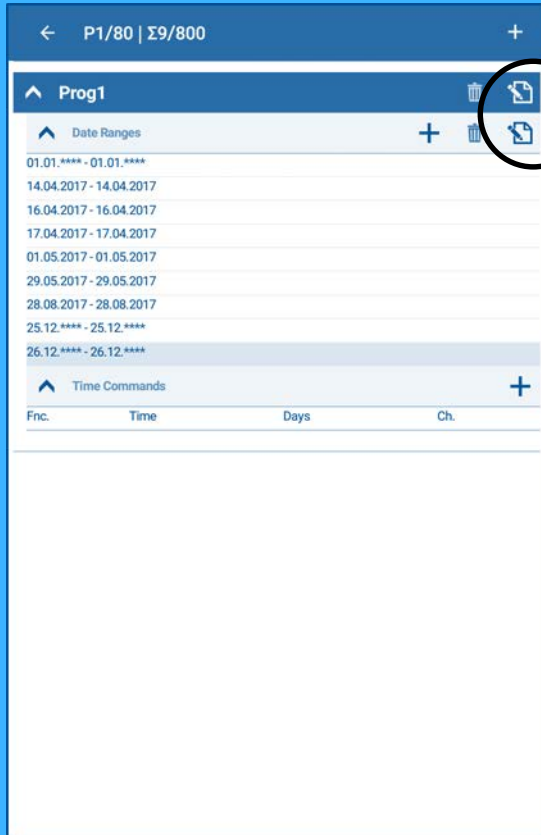


Tap on the change setting icon to edit program information.

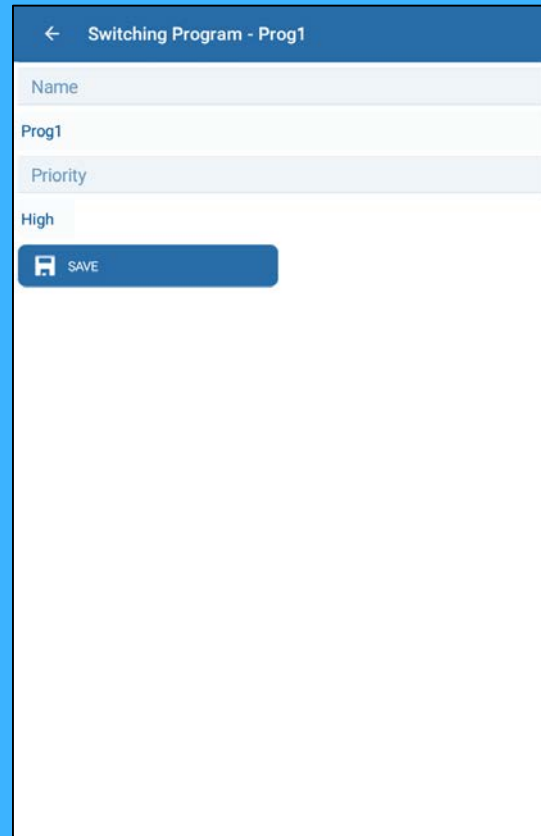


You can change the program name or adjust the priority. Tap the save icon to save your change.

# Devices

Time table – add time command - functions

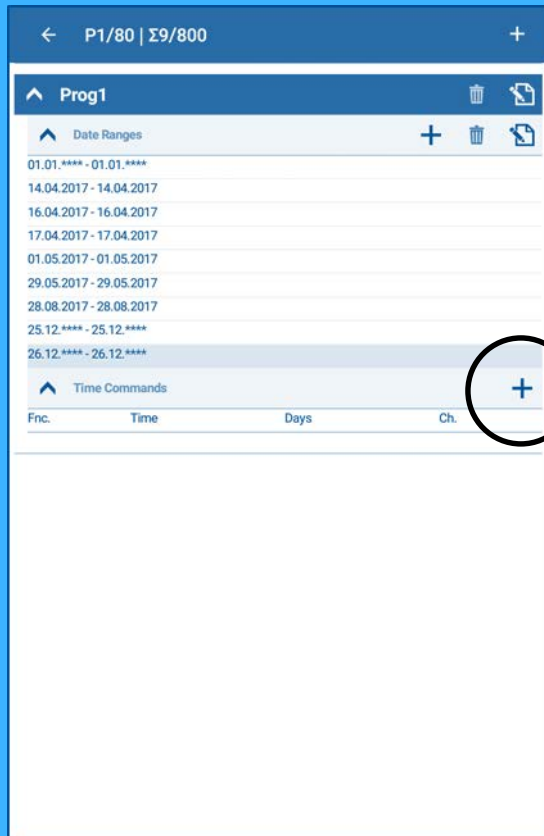



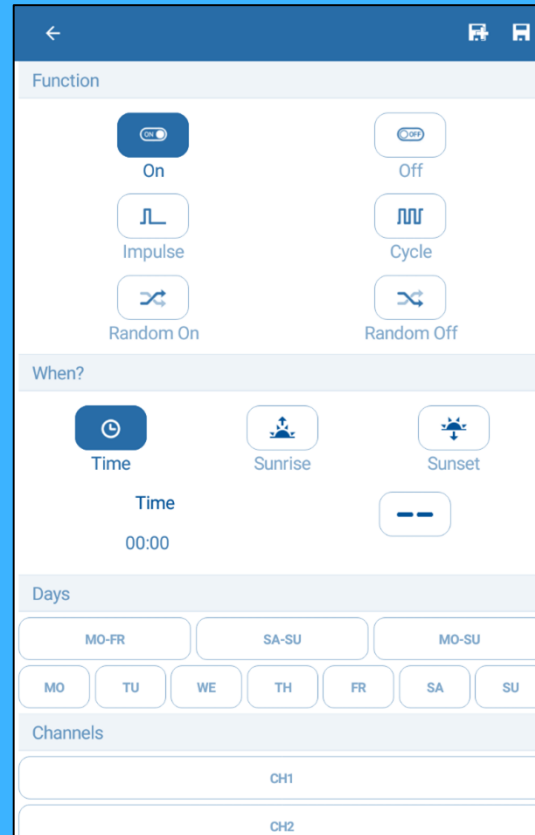



Tap on the (+) button to add an event.




Tap on the appropriate function for this event.

Functions


-  On command
-  Off command
-  Pulse command
-  Cycle command (multiple pulse)
-  Random on command
-  Random off command

# Devices

Time table – add time command – times / astro

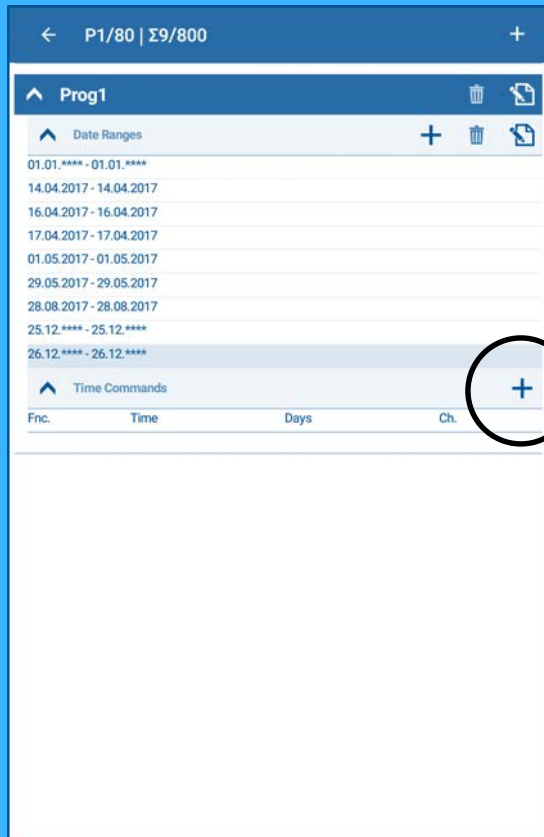

Tap on the (+) button to add an event time.

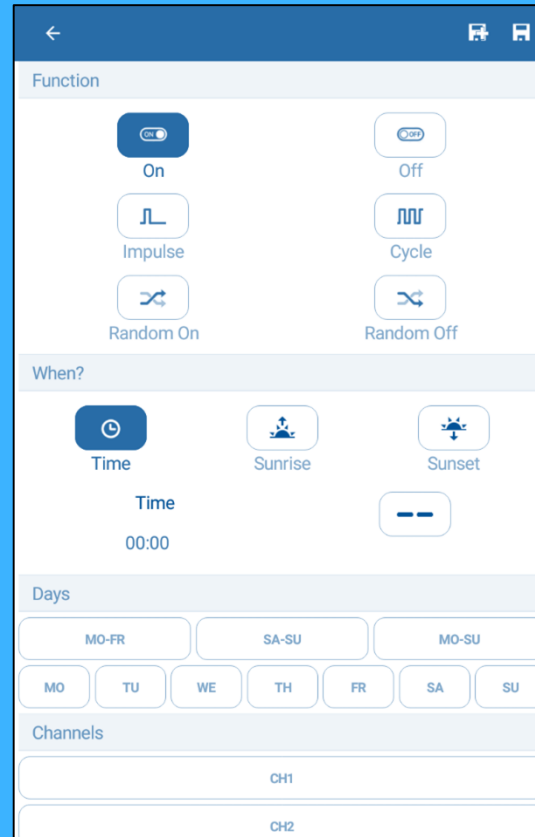

Tap Time (specific time), Sunrise or Sunset to set the timing of the event.

Time selection  
+ astro



Sunrise



Sunset



Open Nightbreak-menu



If set time is BEFORE  
SUNRISE



If set time is AFTER  
SUNRISE




If set time is BEFORE  
SUNSET



If set time is AFTER  
SUNSET

# Devices

Time table – add time command – days

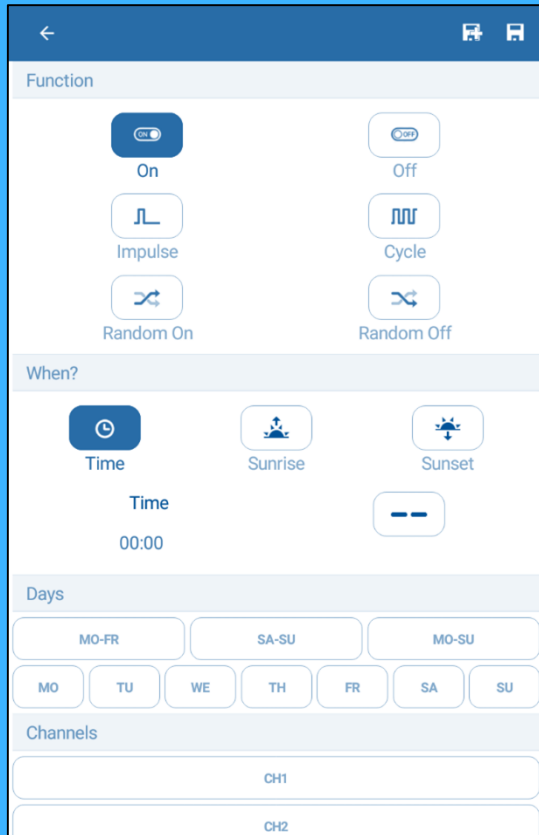


Day selection

Tap on a predefined day grouping or the individual days that this event should happen.

# Devices

Time table – add time command – channels

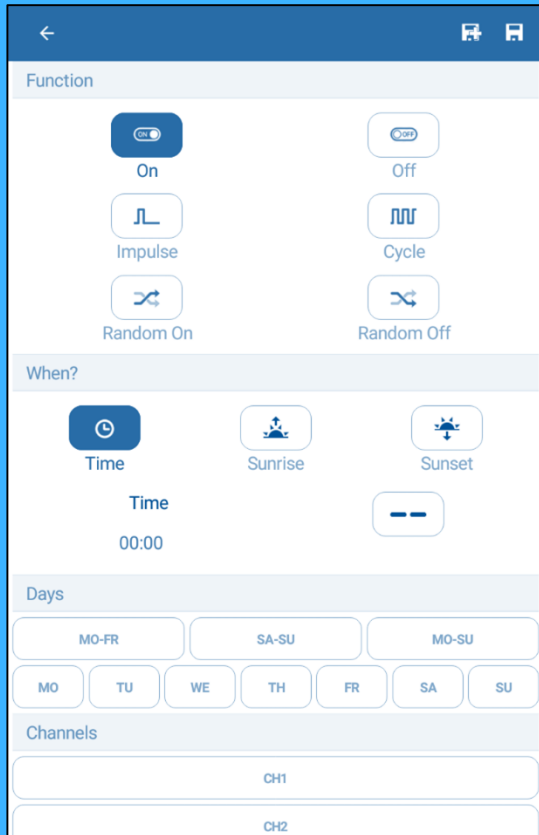

Channel selection



Save + add more data



Save + end

Tap on each channel that this event applies to. Tap the Save icon to save settings.



# Menu navigation- Template


New template



From the main screen, tap on the Template icon to see the templates overview




Tap on the add button to create a new template.

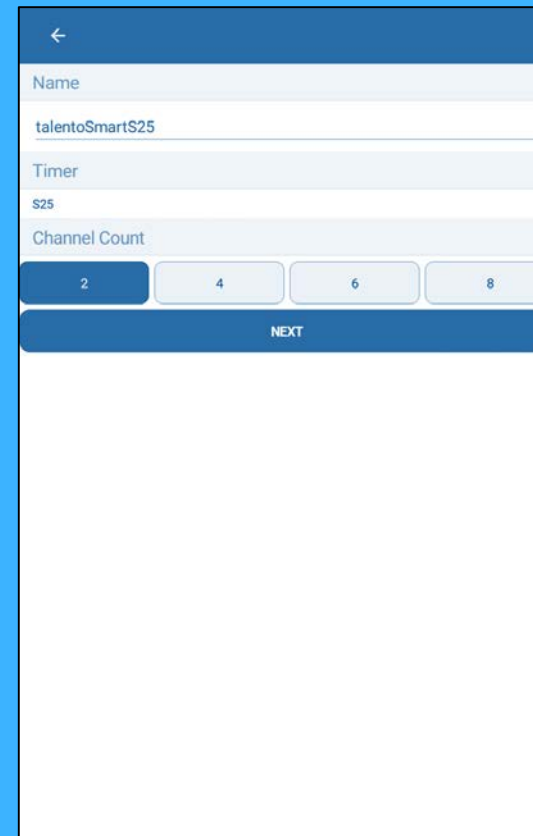

Timer and template can be renamed here. Tap on the Next button to save.

# Template


New template

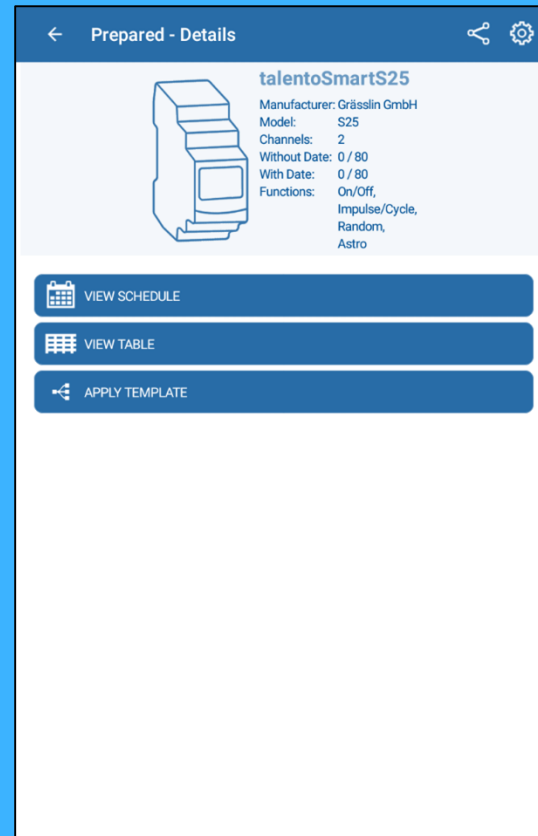

 Go back

 Share template

 Timer settings

 View schedule

 View time table

 Apply template







Timer settings can be changed, then tap the back arrow to confirm and save.

# Template

New template




Tap on the share button to send the template e.g. via E-Mail.





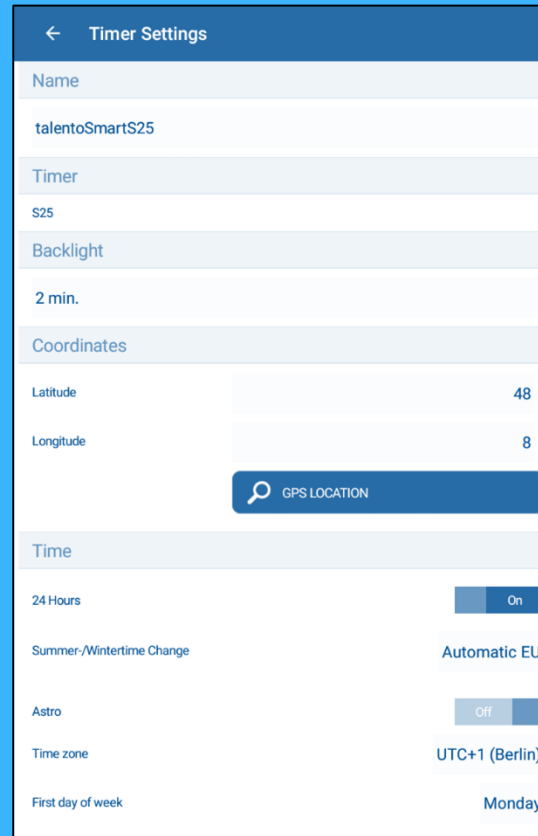

-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template

# Template

New template




Tap on the gear symbol to access timer settings.


-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template

# Template


New template

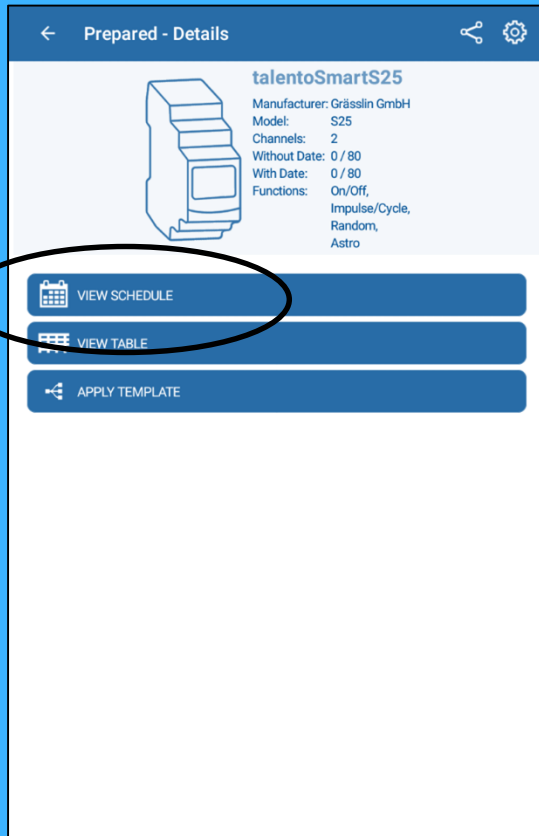


 


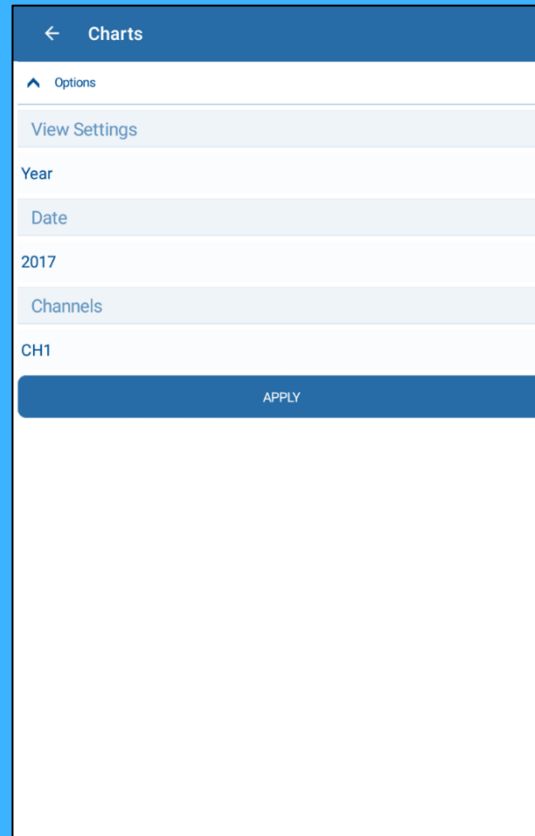

Tap on View Schedule to create a chart.

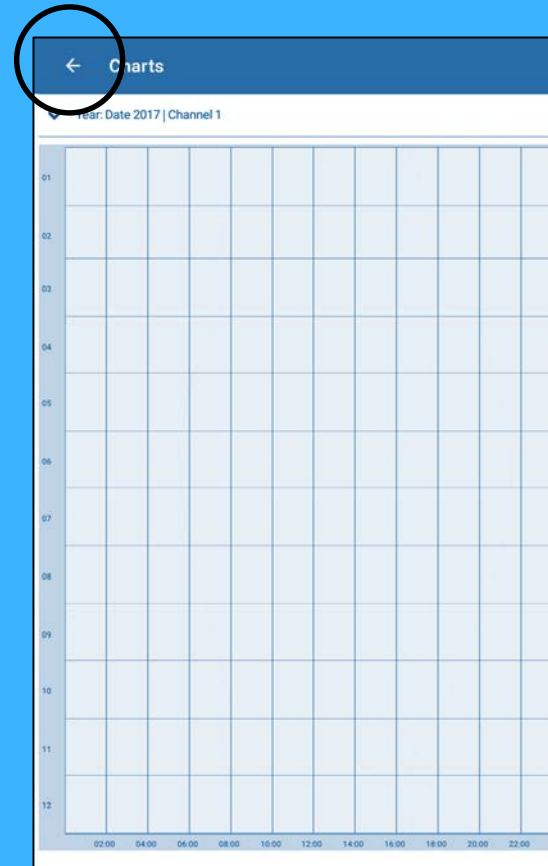

Set parameters and tap APPLY to confirm.





Tap the back arrow to return to the main screen.


 





-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template
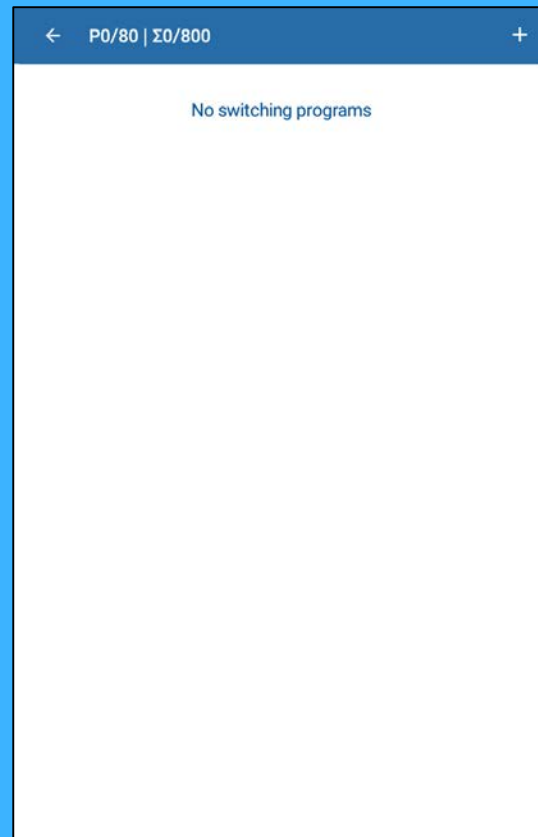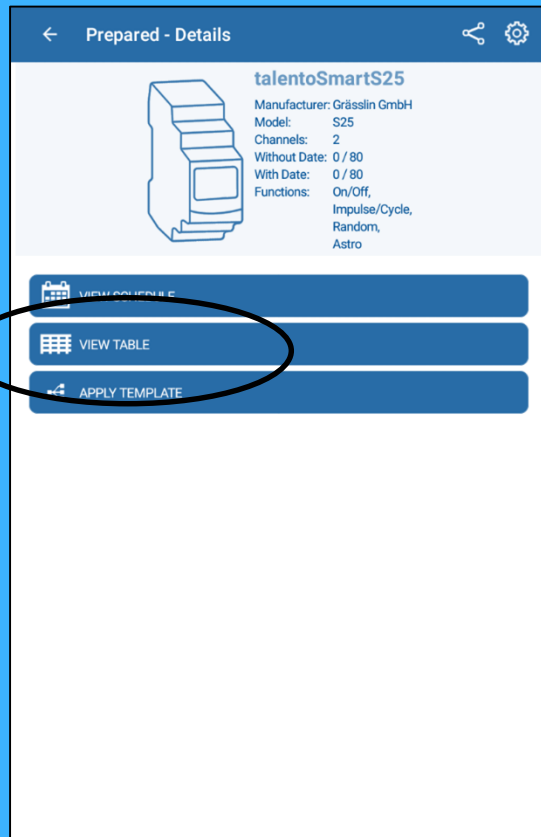
# Template

New template




Tap on the table symbol to get to the time table


-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template
-  Add data

# Template


 


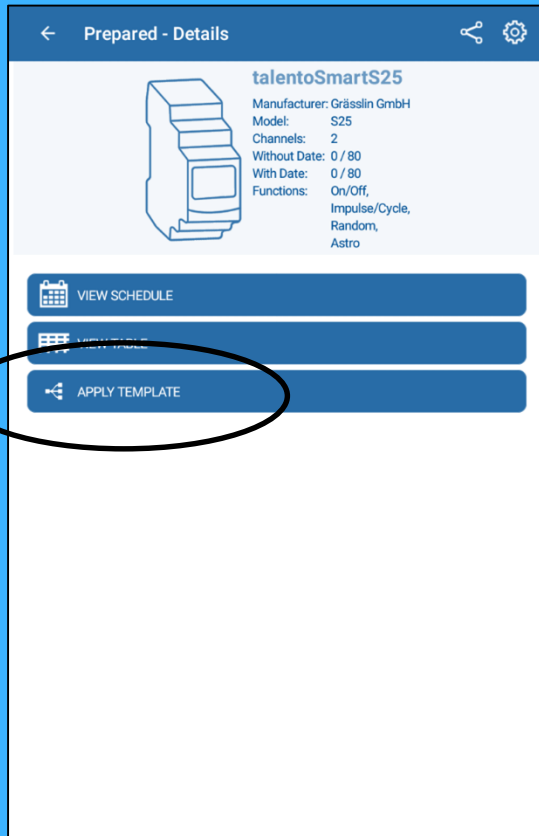

New template

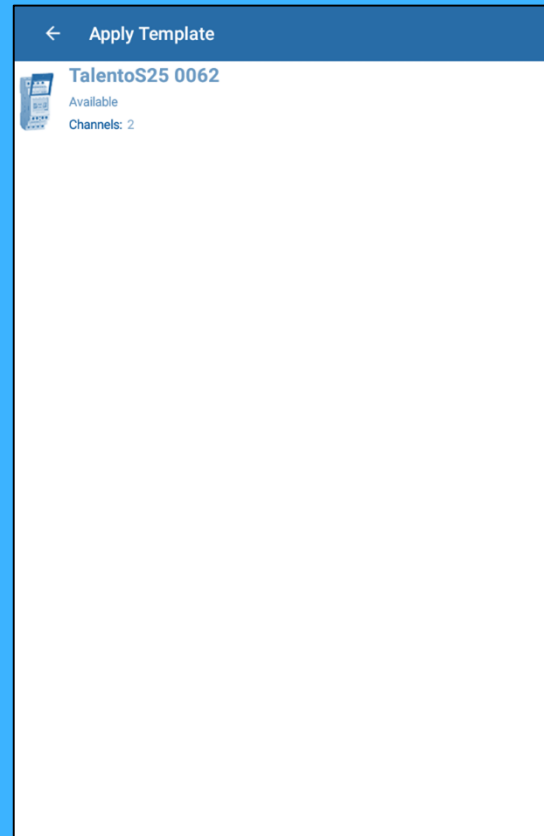

Tap Apply Template to send template to a device.



Select device to upload template.

-  Go back
-  Share template
-  Timer settings
-  View schedule
-  View time table
-  Apply template

# Menu navigation- Settings

## Settings



DEVICES    TEMPLATES    **SETTINGS**

Language

English (United States)

Bluetooth-Connection

Synchronize time when connect to timer  On

Backlight

2 min.

Coordinates

Latitude 48°

Longitude 8°

GPS LOCATION

Time

24 Hours  On

Summer-/Wintertime Change Automatic EU

Time zone UTC+1 (Berlin)

First day of week Monday

Colors

Color On

Color Off

Color Random

Background Color


Astro lines




# Update Firmware

Current schedule should be saved to the app prior to firmware update. Updating will erase all existing programming in timer.

# Update Firmware

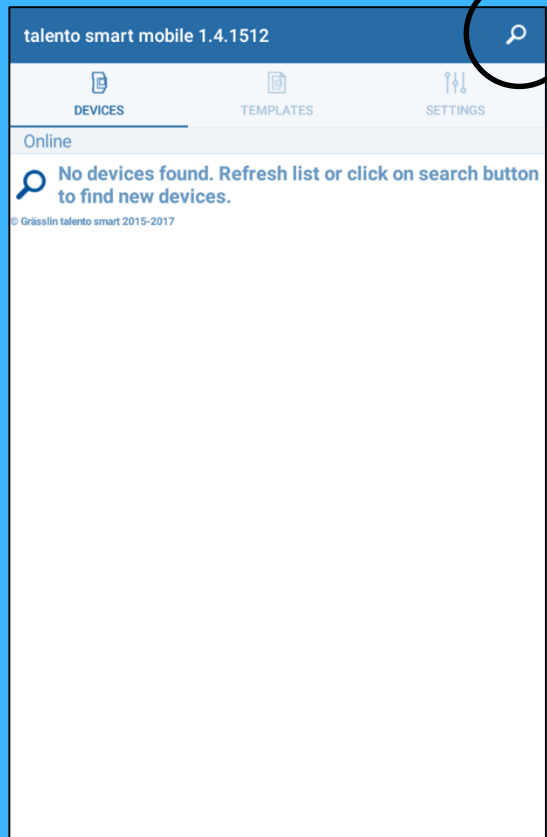

Tap on the magnifying glass to search for available devices.

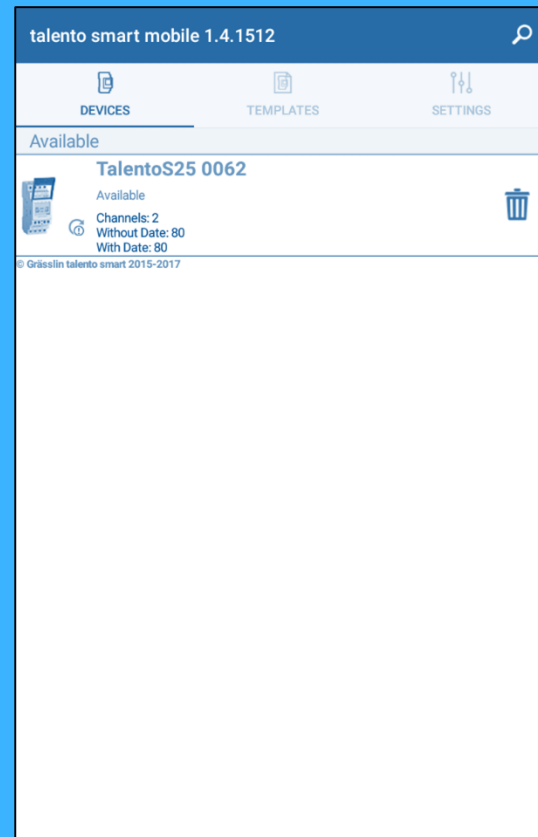


Select time switch to be updated.




Tap the gear symbol to access timer settings.


# Update Firmware

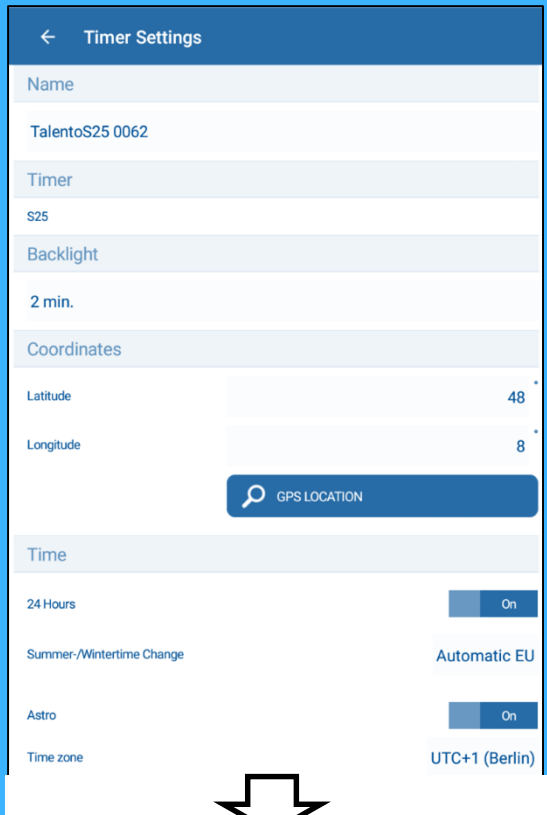

Scroll down to update firmware.

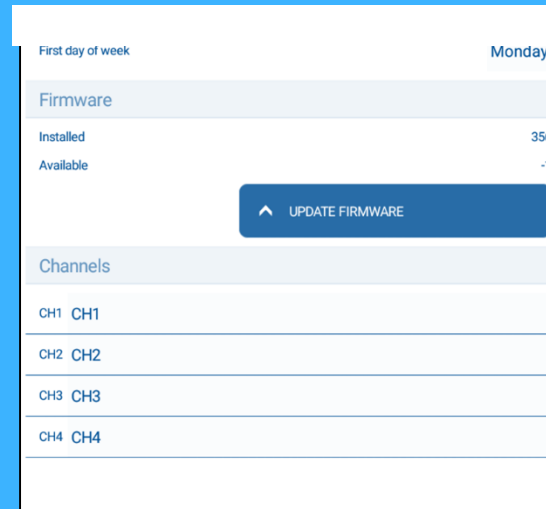

Select Update firmware.

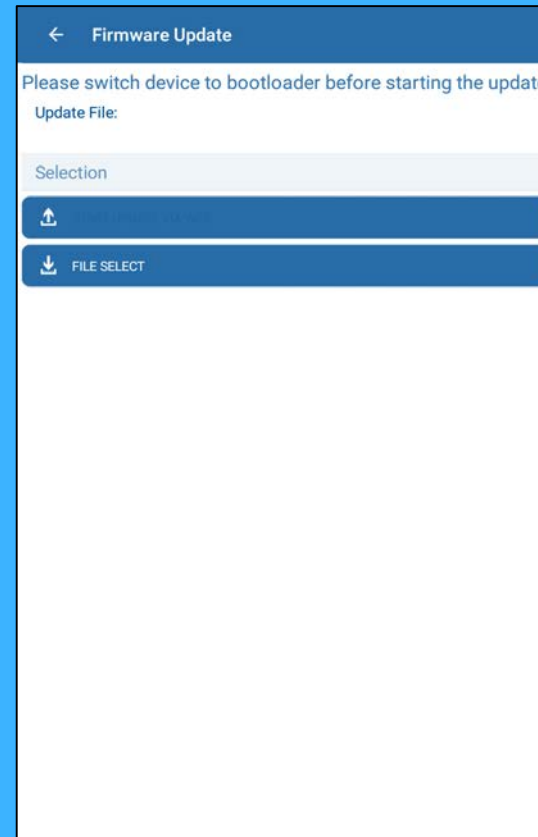

Switch device to bootloader mode.

# Update firmware

## Bootload



1. Step: Press and hold reset button.



2. Step: Press menu button and hold it .



3. Step: Release reset button.




4. Step: Release menu button.



The display should start to flash

# Update Firmware

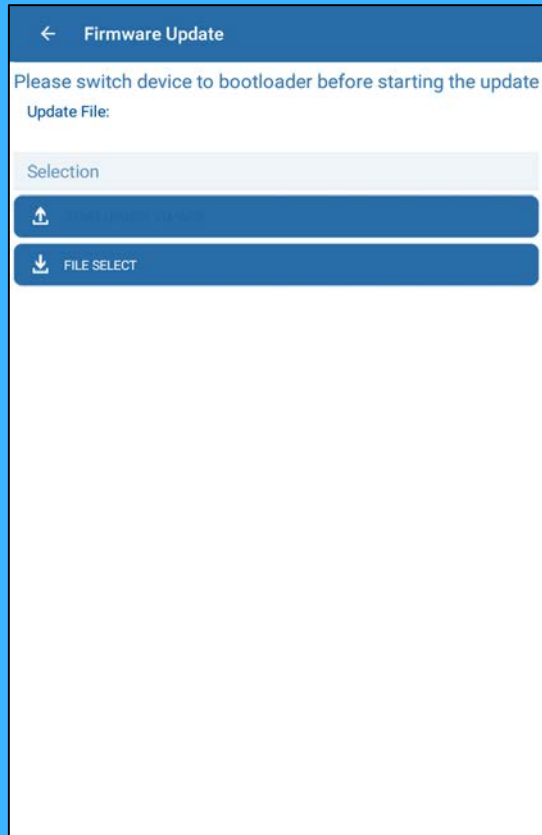

Select update from displayed files.



In case of questions please do not hesitate to contact your technical support (856) 396-7900 ext.3

