



# **Operating Instructions For SU-90 Auto-Fill for Hot Food Tables**




**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

# START UP PROCEDURE

## STEP 1:

Close the Quarter Turn Valve on the Drain Outlet located on the underside of the unit (**Figure 1**).

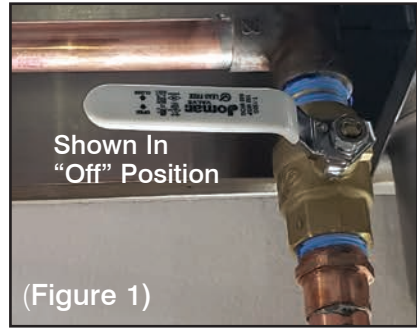

## STEP 2:

Activate the Auto Fill by turning switch to on position located on the front panel of the unit. (**Figure 2**)





## STEP 3:

Once water reaches the sensor level & stops (**Figure 3**), turn on the heating elements (**Figure 4**).

Water will auto fill as the demand requires.

**NOTE:** Water sensor will be only in one basin but will control water levels in all wells.


If water does not begin to fill, check to be sure drain valve is closed and water supply is turned on.

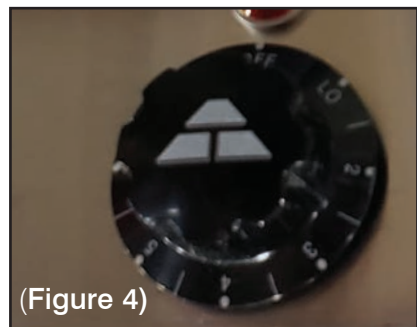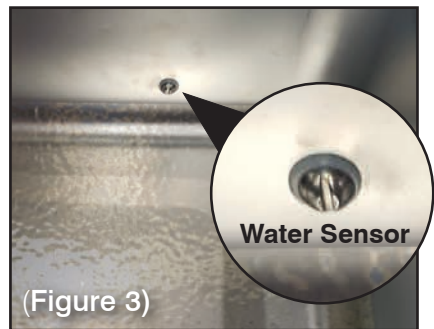

# SHUT DOWN PROCEDURE


## STEP 1:

Turn off heating elements  
(Figure 1).

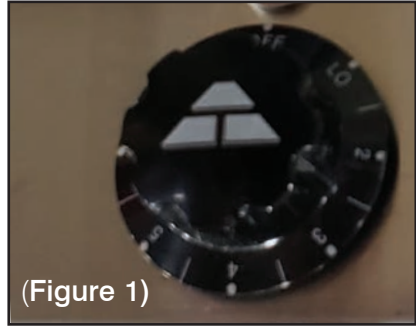

## STEP 2:


Turn off Auto Fill.  
(Figure 2).

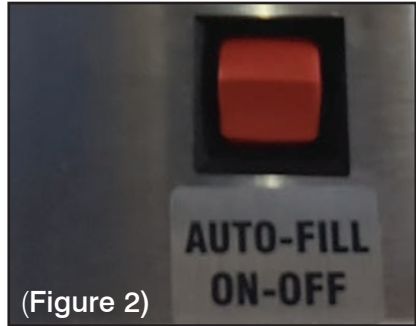

## STEP 3:


Open the Quarter Turn Valve on the Drain Outlet located on the underside of the unit to drain the water (Figure 3).

**NOTE:** be certain Auto Fill power is off before opening drain line. Water will run continuously directly down the drain if this step is skipped.

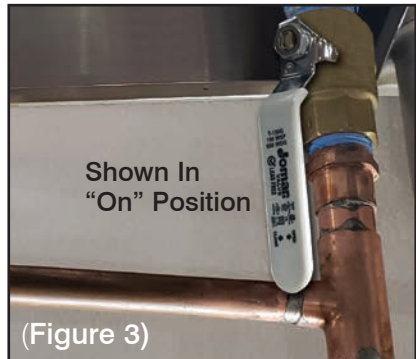


**SEE CONNECTION DETAILS ON BACK PAGE**

# WATER INLET CONNECTION

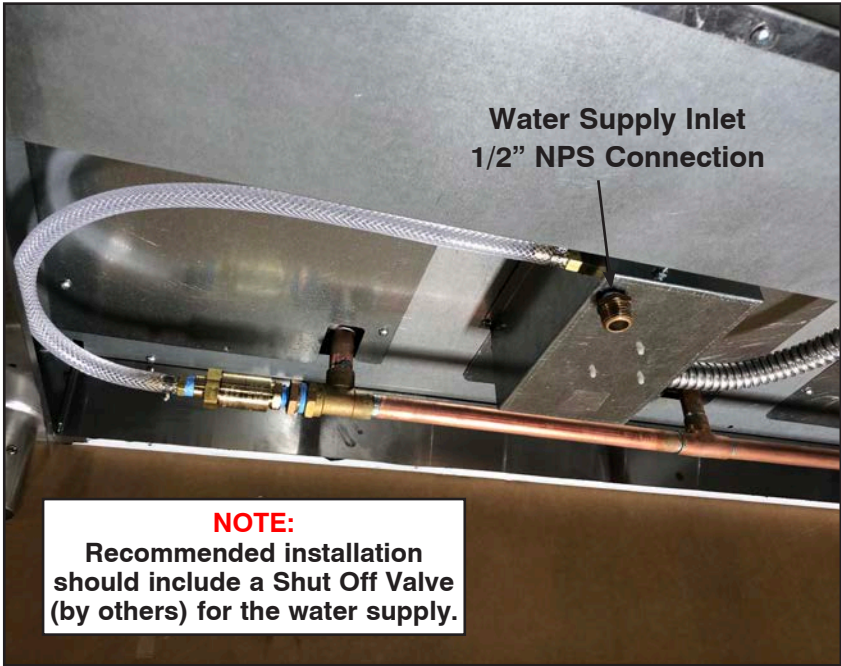

Water Supply Inlet  
1/2" NPS Connection

**NOTE:**  
Recommended installation  
should include a Shut Off Valve  
(by others) for the water supply.

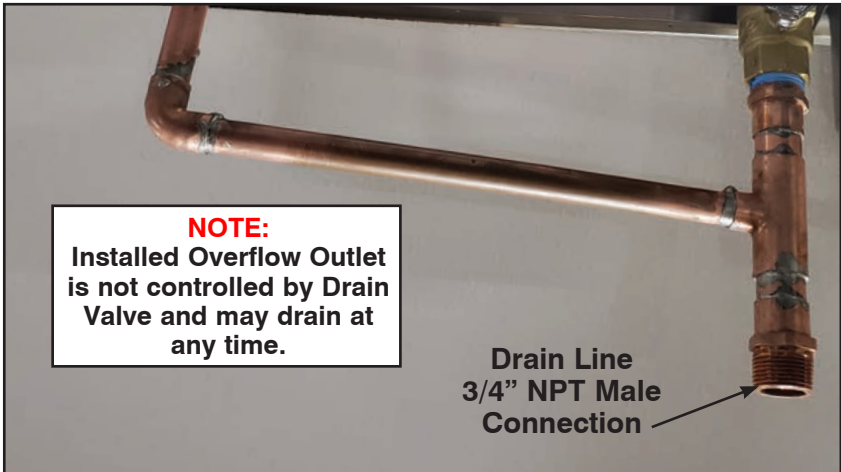

**NOTE:**  
Installed Overflow Outlet  
is not controlled by Drain  
Valve and may drain at  
any time.

Drain Line  
3/4" NPT Male  
Connection



Hauppauge, New York 11788

For Further Assistance  
Contact Customer Service at:

**800-645-3166**

or

[customer@advancetabco.com](mailto:customer@advancetabco.com)

©ADVANCE TABCO JUNE 2022