
Griddle/Equipment Stands with Adjustable Undershelf

ASSEMBLY INSTRUCTIONS


CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

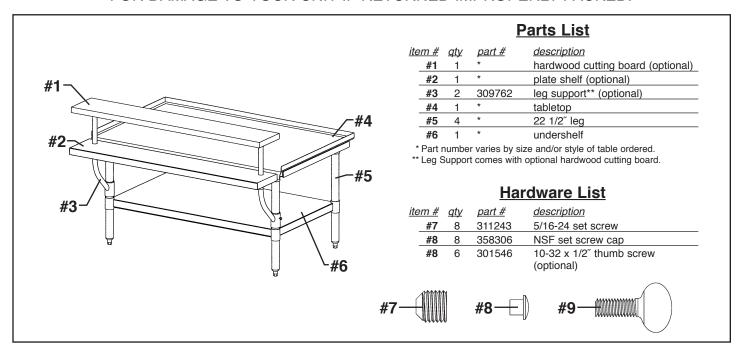

Step 1 - Assemble legs to undershelf.

- Be sure undershelf is level.
- Recommended height from the floor to the top of the undershelf is 10".

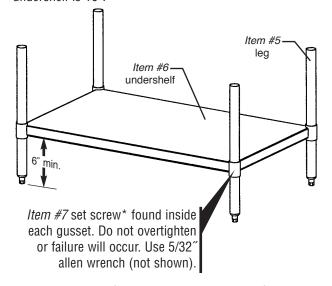


^{*} To be compliant with NSF guidelines, either the supplied NSF set screw caps (Item #8) must be installed over all exposed set screws, or exposed set screws must be filled with silicone sealant.

BEFORE CONTINUING, PLEASE NOTE:

If you ordered optional plate shelf and/or optional hardwood cutting board, proceed to **Step 2**. If not, proceed to **Step 3**.

Step 2 - Assemble leg supports to front legs at desired location.

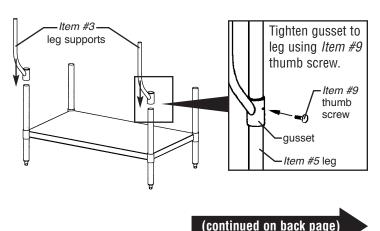

minada dir badık pago)

EG9981 Revised 06/15




- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A. www.eaglegrp.com
- Phone: 302/653-3000 (Foodservice) 800/441-8440 (MHC/Retail) 800/637-5100
- Fax: 302/653-2065

Griddle/Equipment Stands with Adjustable Undershelf

ASSEMBLY INSTRUCTIONS

Step 3 - Assemble tabletop to leg/undershelf subassembly.

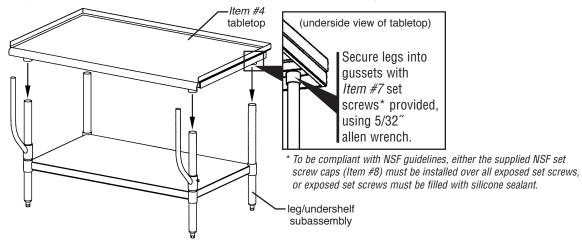


PLEASE NOTE:


If you ordered optional plate shelf and/or optional hardwood cutting board, proceed below.

Otherwise, assembly is complete.

Step 4 - Slide plate shelf over leg supports to desired location.

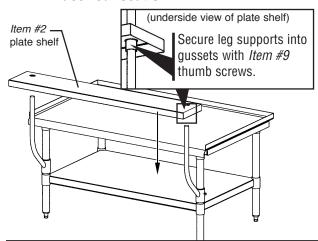

Step 5 - Set hardwood cutting board onto

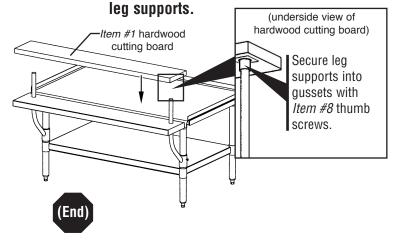

FOR CLEANING:

- 1. Wooden cutting boards, butchers blocks, and bakers tables are not intended to be soaked for a prolonged length of time during the cleaning and sanitizing process.
- 2. Wipe down wood surfaces with warm, soapy water. The top or cutting board should be dried with a rag to insure no standing water remains. Most household cleaners like Windex® or Formula 409® can also be used to clean the top or cutting board*.
- 3. Stains can usually be removed with fingernail polish remover or chlorine bleach without damage to the wood surface.
- 4. The Urethane finish is an exceptionally durable finish. However, NO finish is waterproof. If the wood surface is to be kept immaculate, treat it like a piece of furniture.
- 5. In most cases, the finish will last for years without further treatment. However, over time, the finish will degrade with continuous use and cutting directly on the surface. If desired, the surface can be sanded down and refinished. We recommend Emmet's "Good Stuff" gel urethane wood finish.
 - * Exceptions: Do not use ammonia-based products as they can cloud the finish. Abrasive cleaners and scouring pads can scratch the top.



- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A. www.eaglegrp.com
- Phone: 302/653-3000 (Foodservice) 800/441-8440 (MHC/Retail) 800/637-5100
- Fax: 302/653-2065