


ALL DC-ALL FLR-MODEL CABINETS

DIPPER WELL-INSTALLATION KIT INSTRUCTIONS

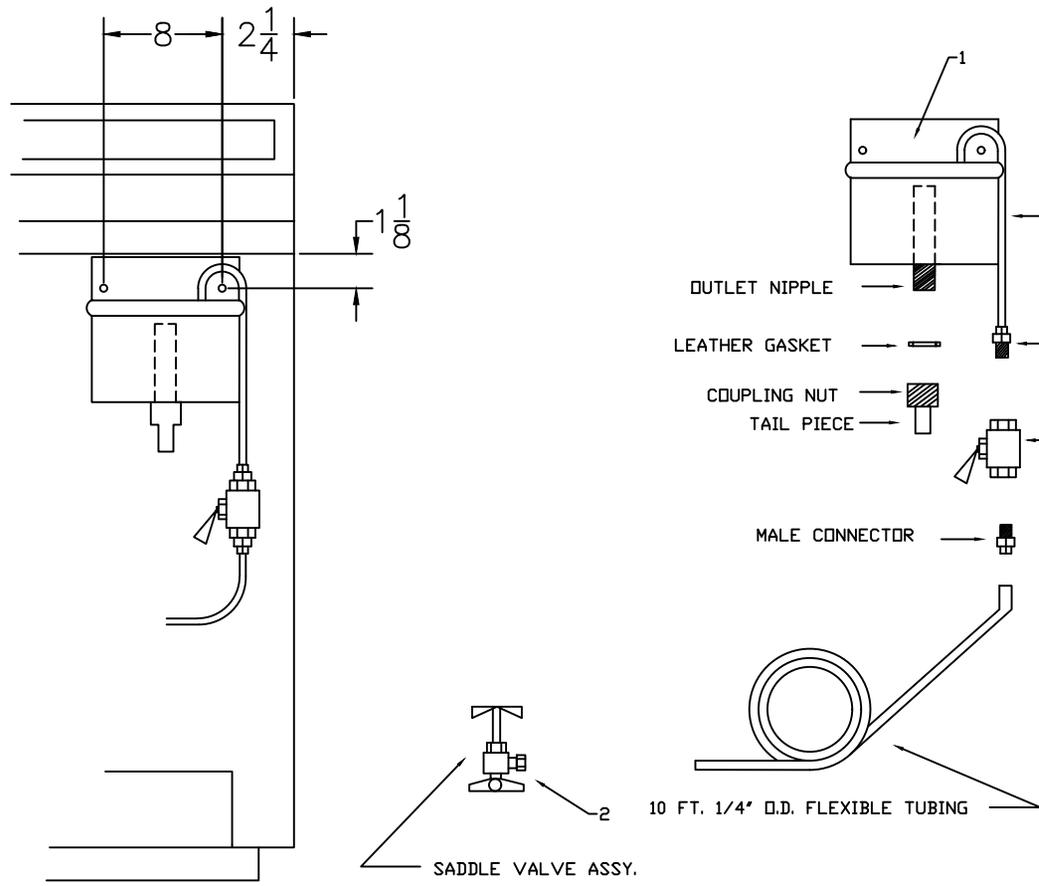

1- ATTACH DIPPER WELL TO CABINET WITH (2) 8"x3/8" SIMIS. SHUT OFF MAIN VALVE TO WATER SUPPLY AND RELEASE THE PRESSURE BY OPENING ANY SPIGOT IN THE SYSTEM. DRILL 1/4" DIAMETER HOLE IN THE WATER LINE ON BOTTOM SIDE OF PIPE.

2- ATTACH SADDLE AND VALVE. (BE SURE VALVE IS IN CLOSED POSITION). MAIN WATER VALVE CAN BE TURNED ON. CONNECT REMAINING PARTS AS SHOWN IN ILLUSTRATION.

NOTE: DRAIN FROM DIPPER WELL CAN BE CONNECTED 3 WAYS.

- 1- BY REGULAR WATER HOSE CONNECTIONS.
- 2- BY FLEXIBLE PLASTIC TUBING.
- 3- BY STANDARD PIPE FITTINGS.

PROPRIETARY INFORMATION
 This drawing is the property of Master-Bilt Products. It contains proprietary information and is disclosed in conjunction with the understanding it will not be reproduced or copied directly or indirectly and is not to be used in whole or in part to assist in making or to furnish any information for the making of drawings or prints of apparatus embodying features, data or information derived in any manner from this drawing without the express written consent of Master-Bilt Products. These materials are also protected under Copyright Law and Treaties.

A		UPDATED INSTRUCTIONS	BH	10/24/19
DWG.: 050-90002		PART:		
MB MASTER-BILT Refrigeration Solutions		MODEL: ALL DC & 6, 8 FLR		
BY: JKS	CKD. BY:	DATE: 10-7-01		

1	050-90002	DIPPER WELL INSTALLATION KIT
PCS. REQ'D.	PART NO:	DESCRIPTION