



## Installation Instructions For “EC” SERIES DROP-IN SINKS



**DI-1-5SP-EC**



**DI-1-10SP-EC**



**DI-2-10-EC**



**DI-3-10-EC**

**⚠ WARNING:**

Equipment that includes a faucet may expose you to chemicals, including lead, that are known to the State of California to cause cancer or birth defects or other reproductive harm. For more info., visit [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

**Contents:**

- (1) Drop-In Sink
- (1) Gooseneck 4" O.C. Deck Mount Faucet
- (1 OR 2) K-6 Basket Drain(s)
- (4) Under-Counter Mounting Brackets
- (4) Nuts

**Tools Required:**

- Ruler or Tape Measure
- Pencil
- Saber Saw or Jig Saw
- 1/4" and 3/8" Drill Bit
- Adjustable Wrench

**Material Required:**

- Silicone Sealant
- Plumbing Putty

**Recommended Safety****Materials:**

- Safety Glasses
- Work Gloves

**STEP 1**

- Remove all contents from carton. (**NOTE:** Check for concealed damage - Notify Carrier of any damages immediately)

**STEP 2**

- Cut opening at desired location on countertop (See Chart on Back Page). **NOTE:** Cut 1" radius at four intersecting corners.
- Place Drop-In Sink into opening. Mark location of four threaded studs at each corner (**Figure 1**). Remove Drop-In Sink and drill four 3/8" diameter holes.

**See Back Page For Cut-Out Chart**

- **NOTE: BEFORE CUTTING COUNTER TOP, VERIFY CUTOUT DIMENSIONS!**

**REMEMBER: MEASURE TWICE,  
CUT ONCE!**



**Figure 1**

### STEP 3

- Install Drain(s) through Sink Body. Apply a bead of Plumber's Putty on the inside between the Drain Flange and Sink. Follow steps below...



1. Add Rubber Washer




2. Add Fiber Washer



3. Screw on Die Cast Nut and Tighten

### STEP 4

- Install Faucet (as shown).

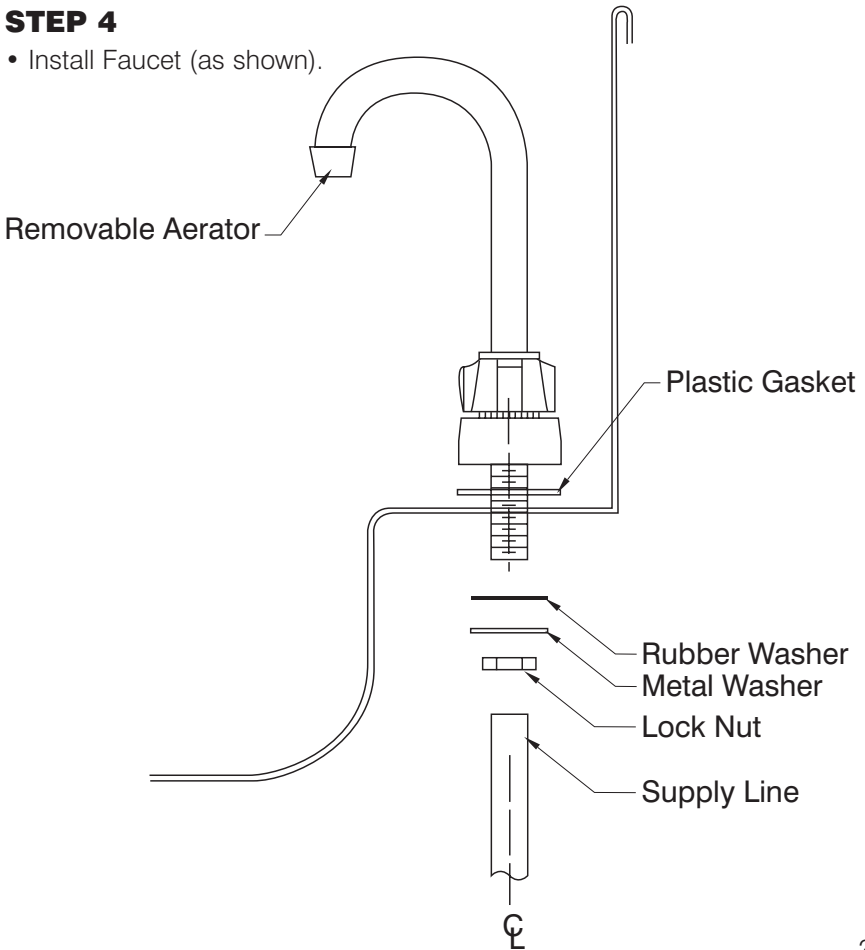

## STEP 5

- Apply a bead of Silicone Sealant along edge of cut out (**Figure 2**).
- Insert Drop-In Sink into cut-out while lining up the four holes with the threaded studs and push down into the bead of Silicone.



Figure 2

## STEP 6

- From the underside, place each bracket on an angle and tighten each nut on all four threaded studs. (**Figure 3**).
- **DO NOT OVERTIGHTEN!**
- Connect drain and faucet supply.
- Remove Aerator & flush line.
- Replace Aerator



Figure 3

## CUT-OUT SIZES

MODEL	Left To Right	Front To Back
DI-5-SP-EC	10 1/2"	16 3/4"
DI-1-10SP-EC	10 1/2"	16 3/4"
DI-2-10-EC	23 1/2"	17 1/2"
DI-3-10-EC	35 1/2"	17 1/2"



Edgewood, New York 11717-8380

**For Further Assistance  
Contact Customer Service at:**

**800-645-3166**

or

**customer@advancetabco.com**

©ADVANCE TABCO SEPTEMBER 2018