



**Installation Instructions for  
K-117 Add-A-Faucet  
(Connecting to a DTA-53, K-115 & K-116  
Prerinse Faucet)**



**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

**⚠ WARNING:** Equipment that includes a faucet may expose you to chemicals, including lead, that are known to the State of California to cause cancer or birth defects or other reproductive harm. For more Info., visit [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).

**Step 1:**


Locate the longest Chrome Riser from Perinse Faucet model DTA-53, K-115 or K-116 **(Figure A)**. Remove the bottom nut from this Riser **(Figure B & C)**.



**(Figure A)**




**(Figure B)**

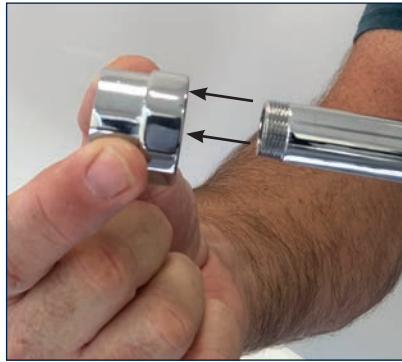


**(Figure C)**

**Step 2:**

Using the Riser Nut you just removed in Step 1, insert the Nut onto the Perinse Faucet Body and tighten **(Figure D & E)**.

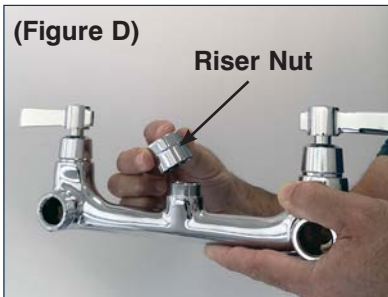

**(Figure D)**

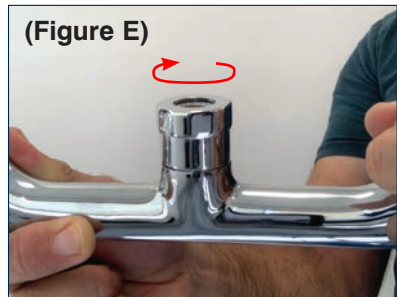

**(Figure E)**

**Step 3:**

Insert the K-117 Faucet Body tightly into the Riser Nut on the Preinse Body and tighten. **(Figure F)**.



**(Figure F)**

**Step 4:**

Locate the long Preinse Riser and insert into the smaller existing thread on the K-117 Body and tighten **(Figure G & H)**.



**(Figure G)**



**(Figure H)**

**Step 5:**

Insert K-117 Swing Spout into the existing thread on the K-117 Body, and tighten nut **(Figure I & J)**.




**(Figure I)**



**(Figure J)**

**Step 6:**

Check all connections and make sure they are tight.

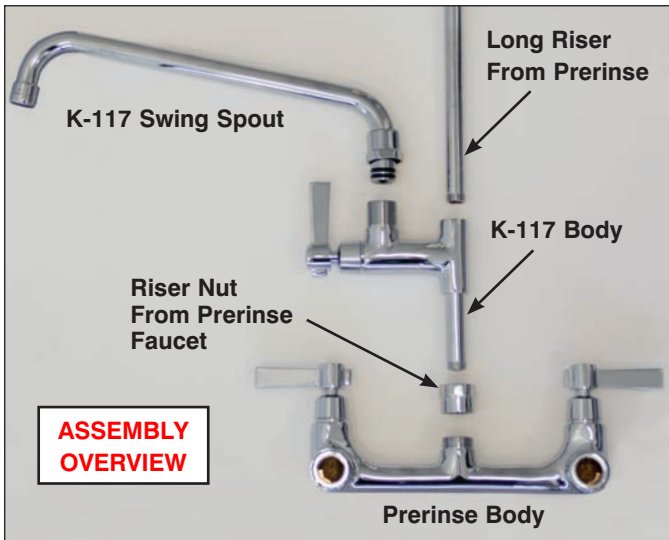

**Hauppauge, New York 11788**

OCTOBER 2020