

Dis-assembling | CLEANING | Re-assembling

For more detailed information on operation and cleaning, go to www.citrusamerica.com/raining



1. Empty fruit basket and fruit supply tunnel. Remove fruit basket by gently turning it to the right.



2. Remove rotation plate.




3. Clean basket area with soft damp towel. Dry. DO NOT CLEAN UNDER RUNNING WATER. DO NOT TAKE OFF.




4. Remove splash protector.




5. Remove side chutes by pressing the fastening clip and sliding chutes upward out. HANDWASH ONLY!

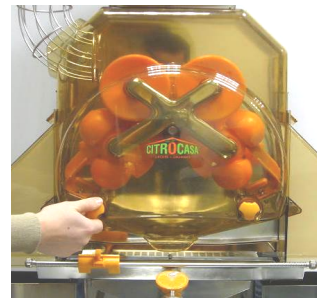


6. Remove front cover: Pull the bottom out and lift up and away from retaining bolts up top. HANDWASH ONLY!

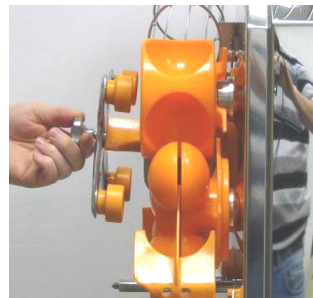

7. Loosen cross holder screw and remove cross holder and screw as one unit.

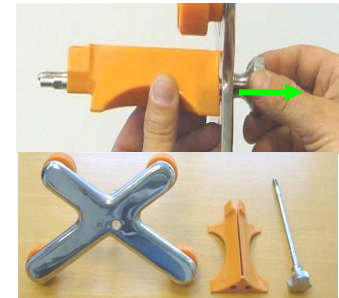


8. Pull out cross holder screw → 3 parts: cross holder, knife guide, screw.

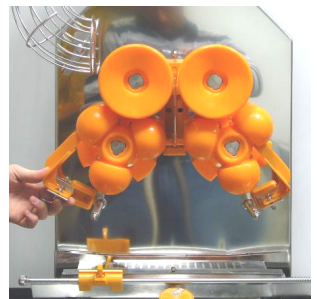


9. Remove peel ejectors.




10. Remove upper pressing elements.

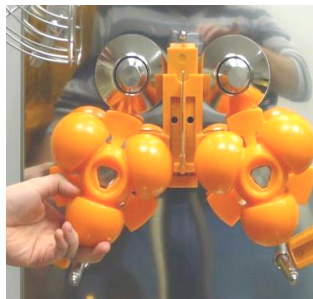


11. Remove lower pressing elements.

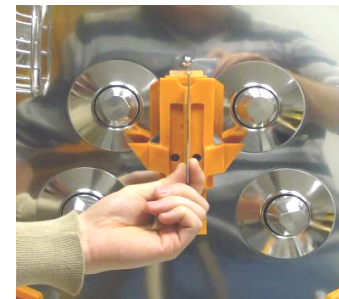

12. Lift knife up and pull out. CAUTION: BLADE IS RAZOR SHARP!

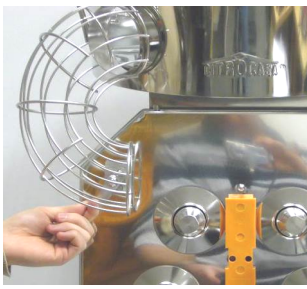


13. Open supply tunnel locking lever and remove supply tunnel.

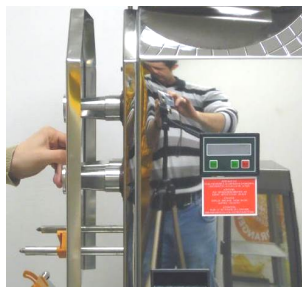


14. Remove double cover (back plate).



15. Remove MTS System. Take off **MTS swiper** by pressing the fastening clip to clean separately.

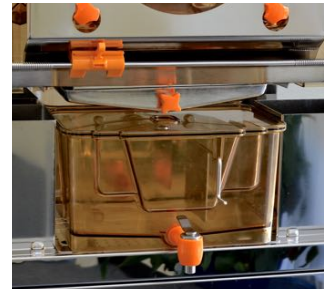

16. Remove juice tank. Take off tank cover and agitator and unscrew tap. **HANDWASH ONLY!**

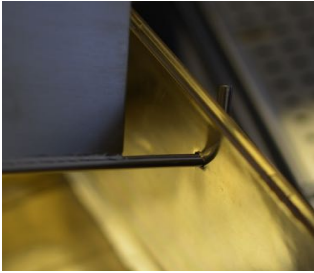

17. JUICE TANK ASSEMBLY: Hold agitator with blade facing up. Loop short hooked end into hole on side of juice tank.



Turn agitator so that blade faces down.




Drop agitator handle into cutout on juice tank. Agitator blade must be able to move freely from side to side.



Screw in tap (washer on outside and nut on inside of tank).



18. Unscrew fruit sieve nut and remove sieve support.

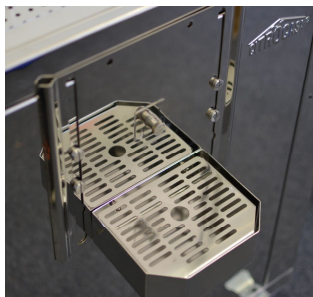

19. Take off all removable parts on cabinet: peel chutes, grate, peel funnel, drip tray and plate.

- 1. BEFORE CLEANING SWITCH OFF AND UNPLUG JUICER.**
- 2. CLEAN JUICER AT LEAST 1X DAY!**
- 3. ENSURE THAT ALL PARTS ARE MOUNTED PROPERLY AFTER REASSEMBLY**
- 4. IF YOUR JUICER DOES NOT START AFTER INPUT FROM ON/OFF SWITCH, REFER TO THE CONTROL PANEL.**
- 5. KEEP THESE INSTRUCTIONS NEAR JUICER!**



ALL PARTS EXCEPT FOR THE PLASTIC FRONT COVER, SIDE CHUTES, AND JUICE TANK ARE DISHWASHER SAFE.



FRONT COVER, SIDE CHUTES, AND JUICE TANK ARE HANDWASH ONLY. USE A NON-ABRASIVE DETERGENT AND A SOFT TOWEL FOR CLEANING.

DO NOT SPRAY OR HOSE DOWN THE MACHINE. ONLY WIPE DOWN.

TECH SUPPORT:

1-855-MY-CITRO

(1-855-692-4876)