



Installation Instructions for FSS-W SERIES WALL MOUNTED TABLES



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Pan Racks manufactured by **ADVANCE TABCO®** are designed and constructed for the use of pan storage and transport and the like. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

© ADVANCE TABCO MARCH 2018

CONTENTS IN BOX

Quantity	Part Description
(1)	Wall Mount Table
(2-4)	Tubular Support Brackets


TOOLS REQUIRED: One 5/32" Allen Wrench, One Open End Wrench or Ratchet, level and pencil

STEP 1:

Place Wall Mount Table face down on a protected surface, exposing the hat channel on the bottom of the unit.

STEP 2:

Insert all Tubular Support Brackets into each Gusset (**Figure 1**). Lightly tighten set screws using a 5/32" Allen Wrench (**Figure 2**).

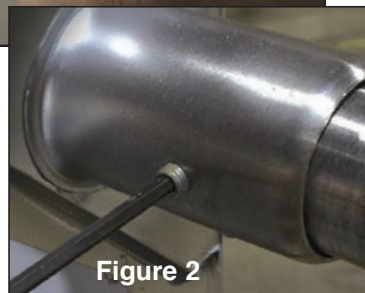

STEP 3:

Have partner(s) hold up table against the wall were to be installed and mark each Support Bracket Flange and Wall Angle Bracket holes on wall for drilling (**See Figure 3 For Diagram**). Level at this time. Loosen or tighten Wall Flange until it sits properly against the wall. Drill proper holes to accommodate mounting hardware (Not included).

STEP 4:

Have partner(s) hold up table against the wall, lining up pre-drilled holes, and secure wall flanges and Angle Brackets to wall. Tighten all set screws in all Support Brackets.

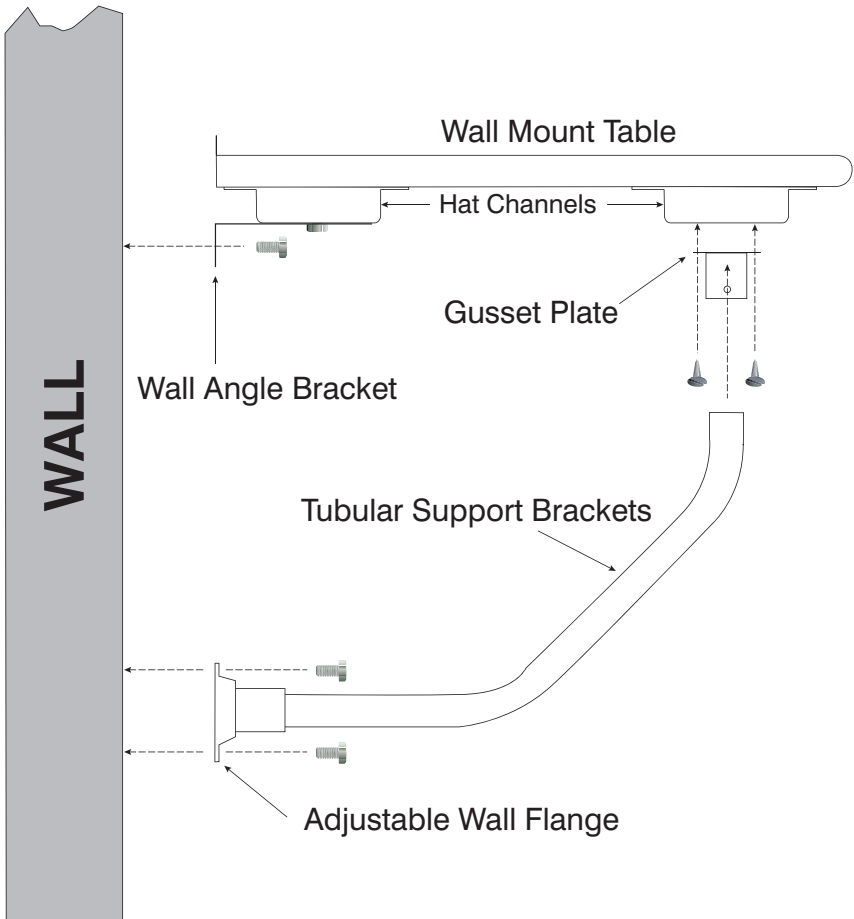


Figure 3



Edgewood, New York 11717-8380

www.advancetabco.com

800-645-3166