

# Champion®

## Installation Guide



64 PRO

### 64 PRO Series Two Tank Rack Conveyor Dishwasher

Models	
64 PRO	86 PRO
90FF PRO	
100HD PRO	



[www.championindustries.com](http://www.championindustries.com)

Issue Date: 9.26.19

**Manual P/N 116084 rev. A**

For machines beginning with S/N RP19038937 and above

3765 Champion Boulevard  
Winston-Salem, NC 27105  
(336) 661-1556 Fax: (336) 661-1660  
Toll-free: 1 (800) 858-4477

2674 N. Service Road, Jordan Station  
Ontario, Canada L0R 1S0  
(905) 562-4195 Fax: (905) 562-4618  
Toll-free: 1 (800) 263-5798

Printed in the USA



The Spirit of Excellence

## National Service Department

### In Canada:

Toll-free: (800) 263-5798

Tel: (905) 562-4195

Fax: (905) 562-4618

email: [service@moyerdiebellimited.com](mailto:service@moyerdiebellimited.com)

### In the USA:

Toll-free: (800) 858-4477

Tel: (336) 661-1556

Fax: (336) 661-1660

email: [service@championindustries.com](mailto:service@championindustries.com)

## ATTENTION


The model no., serial no., voltage, Hz and phase are needed to identify your machine and to answer questions.

**The machine data plate**  
**is located on the side of the top**  
**mounted control cabinet.**

Please have this information ready if you call for service assistance.



## Two ways to **REGISTER YOUR PRODUCT and ACTIVATE YOUR WARRANTY.**

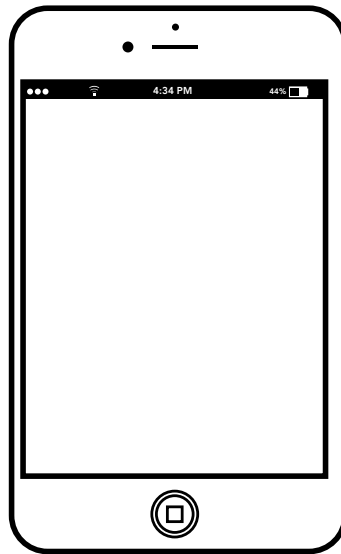

- Use your mobile or computer to go to our website at <http://www.championindustries.com/warranty-registration> and register your product there.
- Use the fax form on the next page.

# PRODUCT REGISTRATION BY FAX

COMPLETE THIS FORM AND FAX TO:

(336) 661-1660 in the USA

1-(800) 204-0109 in Canada

## PRODUCT REGISTRATION CARD

Model

Serial #

Date of Installation: \_\_\_/\_\_\_/\_\_\_

Company Name: \_\_\_\_\_

Address: \_\_\_\_\_  
(Street) State/Province Zip/Postal Code

Telephone #: ( ) \_\_\_\_\_ --- \_\_\_\_\_

Contact: \_\_\_\_\_

Installation Company: \_\_\_\_\_

Address: \_\_\_\_\_

Telephone #: \_\_\_\_\_

Contact: \_\_\_\_\_

**FAILURE TO REGISTER YOUR PRODUCT MAY VOID YOUR WARRANTY**

**IMPORTANT IMPORTANT**

# Revision History

Specifications are subject to change based on continual product improvement. Dishwasher owners may request a manual by calling 1(800) 858-4477 in the USA and 1(800) 263-5798 in Canada.

<b><i>Revision Date</i></b>	<b><i>Revised Pages</i></b>	<b><i>Serial Number Effectivity</i></b>	<b><i>Description</i></b>
8.2.19	All	RP19038937	Released First Edition
9.26.19	14-17	RP19038937	Added 1-point to 2-point electrical connection

## Limited Warranty

# LIMITED WARRANTY

Champion Industries (herein referred to as "The Company"), 3765 Champion Blvd., Winston-Salem, North Carolina 27105, and 2674 N. Service Road, Jordan Station, Ontario, Canada, L0R 1S0, warrants machines, and parts, as set out below.

Warranty of Machines: The Company warrants all new machines of its manufacture bearing the name "Champion and installed within the United States and Canada to be free from defects in material and workmanship for a period of one (1) year after the date of installation or fifteen (15) months after the date of shipment by The Company, whichever occurs first. [See below for special provisions relating to glasswashers.] Warranty registration must be submitted to The Company within ten (10) days after installation either online at Champion Industries website (<http://www.championindustries.com/warranty-registration>) or by the fax form at the front of this manual. The Company will not assume any responsibility for extra costs for installation in any area where there are jurisdictional problems with local trades or unions.

If a defect in workmanship or material is found to exist within the warranty period, The Company, at its election, will either repair or replace the defective part or accept return of the machine for full credit; provided; however, as to glasswashers, The Company's obligation with respect to labor associated with any repairs shall end (a) 120 days after shipment, or (b) 90 days after installation, whichever occurs first. In the event that The Company elects to repair, the labor and work to be performed in connection with the warranty shall be done during regular working hours by a Champion authorized service technician. Defective parts become the property of The Company. Use of replacement parts not authorized by The Company will relieve The Company of all further liability in connection with its warranty. In no event will The Company's warranty obligation exceed The Company's charge for the machine. The following are not covered by The Company's warranty:

- a. Lighting of gas pilots or burners.
- b. Cleaning of gas lines.
- c. Replacement of fuses or resetting of overload breakers.
- d. Adjustment of thermostats.
- e. Adjustment of clutches.
- f. Opening or closing of utility supply valves or switching of electrical supply current.
- g. Cleaning of valves, strainers, screens, nozzles, or spray pipes.
- h. Performance of regular maintenance and cleaning as outlined in the operator's guide.
- i. Damages resulting from water conditions, accidents, alterations, improper use, abuse, tampering, improper installation, or failure to follow maintenance and operation procedures.
- j. Wear on Pulper cutter blocks, pulse vanes, and auger brush.

Examples of the defects not covered by warranty include, but are not limited to: (1) Damage to the exterior or interior finish as a result of the above, (2) Use with utility service other than that designated on the rating plate, (3) Improper connection to utility service, (4) Inadequate or excessive water pressure, (5) Corrosion from chemicals dispensed in excess of recommended concentrations, (6) Failure of electrical components due to connection of chemical dispensing equipment installed by others, (7) Leaks or damage resulting from such leaks caused by the installer, including those at machine table connections or by connection of chemical dispensing equipment installed by others, (8) Failure to comply with local building codes, (9) Damage caused by labor dispute.

Warranty of Parts: The Company warrants all new machine parts produced or authorized by The Company to be free from defects in material and workmanship for a period of 90 days from date of invoice. If any defect in material and workmanship is found to exist within the warranty period The Company will replace the defective part without charge.

**DISCLAIMER OF WARRANTIES AND LIMITATIONS OF LIABILITY. THE COMPANY'S WARRANTY IS ONLY TO THE EXTENT REFLECTED ABOVE. THE COMPANY'S MAKE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED, TO ANY WARRANTY OF MERCHANTABILITY, OR FITNESS OF PURPOSE. THE COMPANY SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. THE REMEDIES SET OUT ABOVE ARE THE EXCLUSIVE REMEDIES FOR ANY DEFECTS FOUND TO EXIST IN THE COMPANY'S DISHWASHING MACHINES AND THE COMPANY'S PARTS, AND ALL OTHER REMEDIES ARE EXCLUDED, INCLUDING ANY LIABILITY FOR INCIDENTALS OR CONSEQUENTIAL DAMAGES.**

The Company does not authorize any other person, including persons who deal in Champion dishwashing machines to change this warranty or create any other obligation in connection with Champion dishwashing machines.

# Table of Contents

Revision History .....	i
Limited Warranty .....	ii
Model Descriptions .....	iv
<b>Installation .....</b>	<b>1</b>
Receiving and Placement.....	1
Installation Codes/Safety Symbols.....	2
Table Connections.....	3
Hot Water Connection .....	4
Steam Connection .....	5
Drain Connection .....	7
Cold Water Connection for Drain Water Tempering Valve.....	8
Ventilation - Vent Hood Fan Control.....	9
Ventilation - Pant Leg Duct Settings .....	10
Detergent Dispenser Connection .....	11
Rinse-aid Dispenser Connection .....	12
Electrical Connection .....	14
Check Motor Rotation .....	16

## Model Descriptions

### Model Size

64 PRO	64" Two Tank Rack Conveyor
86 PRO	64" Two Tank Rack Conveyor with 22" Prewash
90FF PRO	64" Two Tank Rack Conveyor with 26" Front Feed Prewash
100HD PRO	64" Two Tank Rack Conveyor with 36" Prewash

Table 1

### Minimum Operating Temperatures

MODEL	PREWASH TANK	WASH TANK	POWER RINSE TANK	FINAL RINSE
64 PRO	N/A	150°F	160°F	180-195°F

Table 2



## RECEIVING



1. Inspect the machine for damage and immediately report the damage to a supervisor.
2. Check the inside of the machine for accessories and installation parts.
3. Register your machine by fax or online as soon as possible.

**WARNING:**

Use extreme caution to prevent damage to the machine when removing from pallet.

## PLACEMENT

1. Check the dishwasher interior for curtains, panels and supplies.
2. Lift the dishwasher off the shipping pallet and move the machine near its permanent location.
3. Adjust the height and level of the machine using the adjustable legs. Level the machine from side-to-side and front-to-back.
4. Do not remove tags attached to the utility connections.
5. Remove the protective film from the dishwasher exterior.

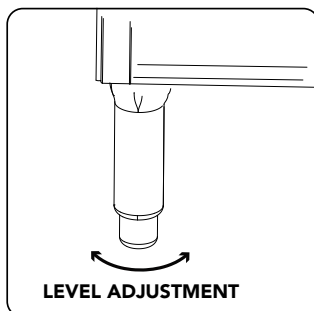


Fig. 1

**NOTE:**

DO NOT REMOVE THE INSTALLATION TAGS ATTACHED TO THE MACHINE UNTIL ALL UTILITIES ARE CONNECTED.

## INSTALLATION CODES

The installation of the dishwasher must comply with all local electrical, plumbing, health and safety codes or in the absence of local codes, installed in accordance with the applicable requirements in the National Electrical Code, NFPA 70, Canadian Electrical Code (CEC), Part 1, CSA C22.1; and the Standard for Ventilation Control and Fire Protection of Commercial Cooking Operations, NFPA 96.



**NOTE:**

Only qualified personnel familiar with the installation of food service equipment should attempt the installation of this machine. Damage or problems associated with improper installation will not be covered by the dishwasher limited warranty.

## SAFETY SYMBOLS

The following symbols are used throughout this manual to alert the reader to important information.



**WARNING:**

Warning statements indicate a condition or practice that can result in personal injury or possible death.



**CAUTION:**

Caution statements indicate a condition or practice that can result in damage to the machine or associated equipment.



**NOTE:**

Note statements highlight important information necessary for the operation of the machine.

## TABLE CONNECTIONS



### NOTE:

Tables should be installed after the machine is placed in its final location, properly leveled and its height properly adjusted. The standard load height for the dishwasher is 34" [864 mm].

When installing the dish tables:

1. The load end table must slope away from the dishwasher to prevent water from entering the machine. The unload table should slope toward the machine to prevent water from pooling on the exit table.
2. The dish rack must not hit the end of the table as it enters or exits the machine. Adjust the table until the track height of the machine is approximately 1/4" above the table edge.
3. Set the tables inside the machine making sure the table flange fits against the wash tank wall. Attach the tables to the machine applying a silicone sealant to the mating surfaces. See Fig. 4.

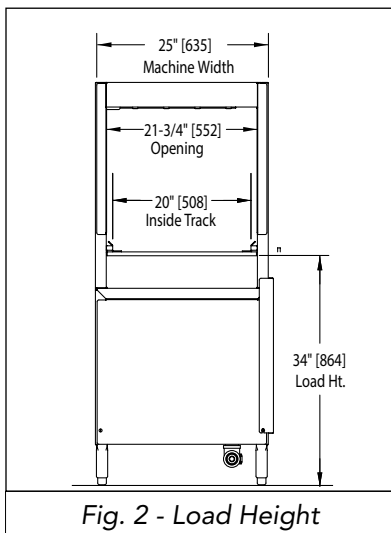


Fig. 2 - Load Height

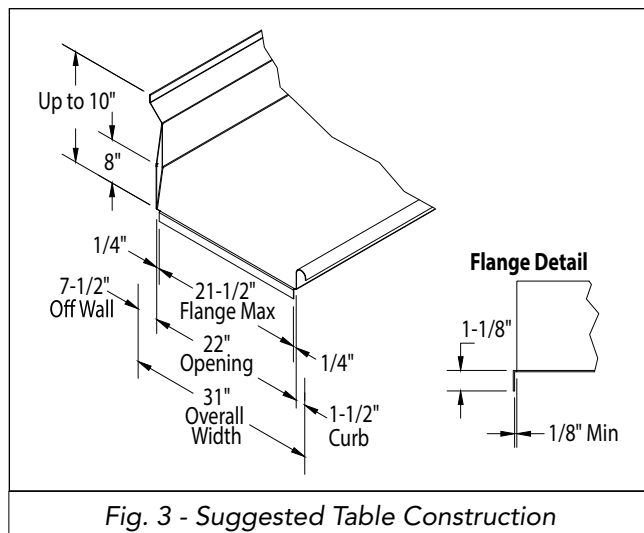


Fig. 3 - Suggested Table Construction

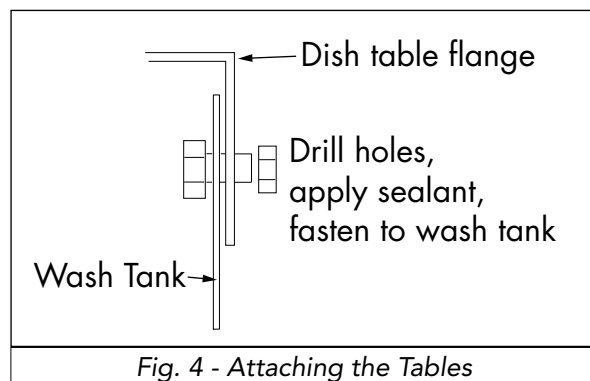


Fig. 4 - Attaching the Tables

# HOT WATER CONNECTION



**HOT WATER**

**!** MINIMUM 3/4" NPT HOT WATER SUPPLY LINE.



**CAUTION:** To prevent damage to the dishwasher supply valves, the installing plumber must thoroughly flush debris from the water supply line before connecting it to the dishwasher. Damage caused by improper installation is not covered by the limited warranty.

BOOSTER RISE °F		MINIMUM INCOMING WATER TEMPERATURE	MINIMUM INCOMING SUPPLY FLOWING PRESSURE	MINIMUM/MAXIMUM OPERATING FLOWING PRESSURE
40°F RISE	12kW	140°F/60°C	45 PSI/310 kPa	20/22 PSI 138-152 kPa
70°F RISE	21kW	110°F/ 43°C	45 PSI/310 kPa	20/22 PSI 138-152 kPa
NO BOOSTER		180°F/ 82°C	45 PSI/310 kPa	20/22 PSI 138-152 kPa

**!** WATER HARDNESS OF 3 GRAINS/US GAL - 0.83 IMP GAL -5.3mg/L or LESS.

**!** INSTALL A 3/4" OR LARGER SHUT-OFF VALVE IN THE WATER SUPPLY LINE AS CLOSE TO THE DISHWASHER AS POSSIBLE FOR SERVICING.

**!** WATER SUPPLY CONNECTION IS LOCATED AT THE TOP OF THE UNLOAD END ON THE BACK OF THE MACHINE (FIG. 5).

**!** FOR MACHINES WITHOUT PRV IT MAY BE NECESSARY TO INSTALL A PRESSURE REGULATING VALVE IN THE INCOMING WATER SUPPLY LINE TO MAINTAIN THE PROPER FLOWING PRESSURE.

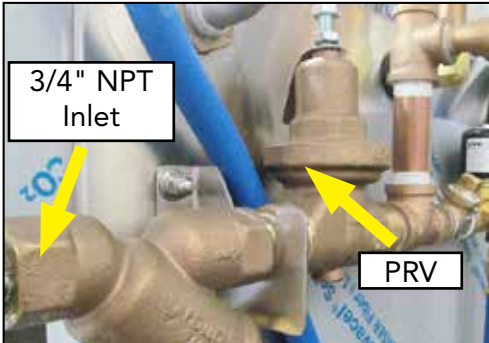


Fig. 5A - Machine with booster and PRV

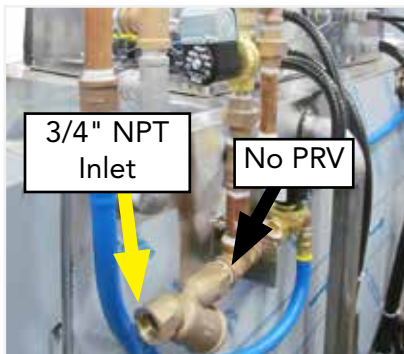


Fig. 5B - Machine without booster or PRV

## STEAM CONNECTION



**CAUTION:** The dishwasher steam connections must comply with all local plumbing, health and safety codes. Damage caused by improper installation is not covered by the limited warranty

**!** CHECK THE STEAM SUPPLY PRESSURE REQUIREMENTS PRIOR TO CONNECTING THE STEAM SUPPLY LINES.

**!** STANDARD REQUIRED STEAM SUPPLY PRESSURE IS 10-30 PSI.

**!** MINIMUM 1-1/4" NPT MAIN SUPPLY STEAM LINE. WASH TANK = 1" NPT, AND EXTERNAL BOOSTER = 3/4" NPT.

**!** STEAM CONNECTION IS ALWAYS LOCATED AT THE RIGHT SIDE OF THE MACHINE.

**!** STEAM CONDENSATE LINE FOR THE MACHINE IS 3/4" NPT, 1/2" NPT FOR BOOSTER

**!** CONDENSATE LINES MUST BE GRAVITY DRAIN WITH NO BACK PRESSURE. A CONDENSATE LIFT PUMP MAY BE REQUIRED IF LINE IS ABOVE THE BASE OF THE DISHWASHER.

## STEAM HEATING

**!** TANK HEAT: lbs./hr. required at 15 PSI = 125 LBS.HR.

**!** STEAM BOOSTER: lbs./hr. required 70°F AT 15 PSI = 120LBS./HR.

**!** WATER HARDNESS OF 3 GRAINS/US GAL - 0.83 IMP GAL -5.3mg/L or LESS.

# SAMPLE MACHINE DRAWING



**STOP:**  
This is a sample drawing.  
**DO NOT USE THIS DRAWING.**

208/60/3

ELECT. DATA	"A"	"B"
MIN. WIRE AMPACITY (AMPS)	110	80
MAX. TIME DELAY FUSE	110	80
MACHINE LOAD AMPS	90	59

ALL ELECTRICAL CONNECTIONS MUST COMPLY WITH THE NATIONAL ELECTRICAL CODE AND OR LOCAL ELECTRICAL CODES.



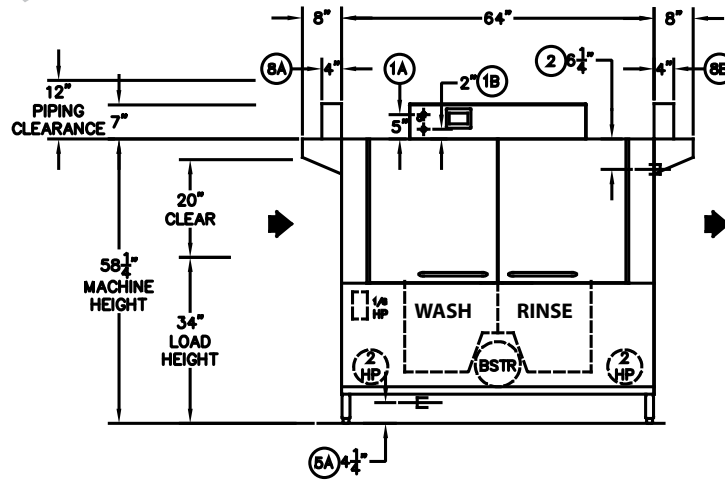


Fig. 6

## DRAIN CONNECTION



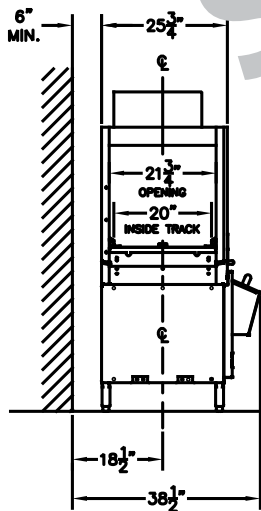

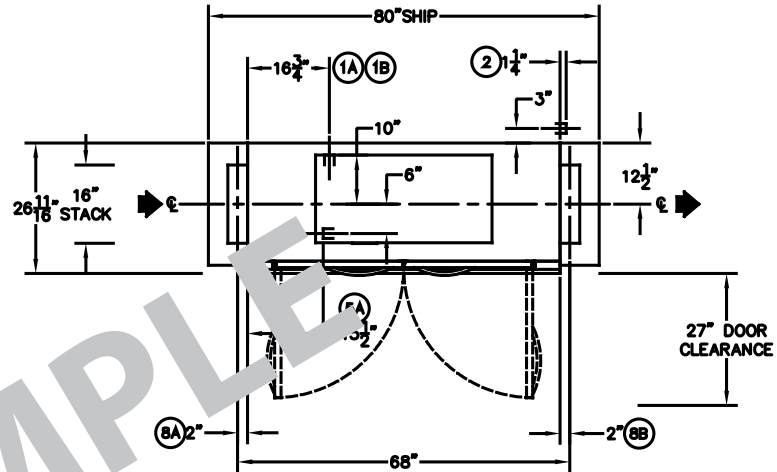

- 
**GRAVITY DRAIN- 1-1/4" NPT DRAIN CONNECTION LOCATED UNDERNEATH MACHINE. MAX FLOW IS 15 US GAL/MIN.**
- 
**USE A DIRECT OR INDIRECT CONNECTION TO THE BUILDING DRAIN IN ACCORDANCE WITH LOCAL CODE.**
- 
**THE DRAIN CONNECTION IS AT THE LOAD END OF THE MACHINE WITH OR WITHOUT PREWASH**
- 
**THE DRAIN VALVE(S) ARE ELECTRIC. THEY OPEN AND CLOSE AUTOMATICALLY WHEN DISHWASHER POWER IS OFF OR ON.**



Fig. 6A - Electric Drain Valve



Fig. 6B - Drain connection



### NOTE:

Procedure to manually open and close the valve on next page.

## DRAIN VALVE OPERATION




- To manually operate the new valve, four 2.5mm socket allen screws must be removed, the valve coil removed, and the valve globe rotated with pliers.

- The valve coil has an indicator line showing valve position. Ensure valve is reassembled in the same position.



**1**

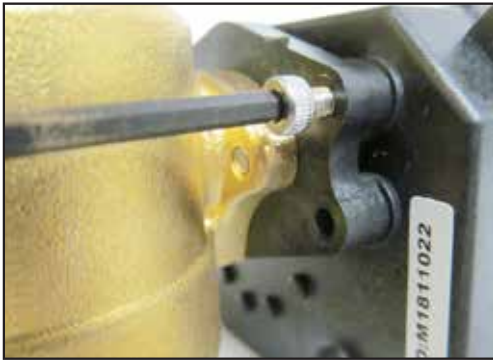

Remove four 2.5mm coil retaining allen screws.

**2**



Remove the coil from the valve body.

**3**



Using pliers, turn the valve body key to the vertical position to open valve.

Reassemble in reverse order.



## Cold Water Connection Drain Water Tempering, (DWT), Valve



**COLD  
WATER**

**!** MINIMUM 1/2" NPT COLD WATER SUPPLY LINE.

MINIMUM INCOMING  
WATER TEMPERATURE

MAXIMUM INCOMING  
SUPPLY PRESSURE

36°F/ 2°C

60 PSI/414 kPa



**CAUTION:** To prevent damage to the dishwasher supply valves, the installing plumber must thoroughly flush debris from the water supply line before connecting it to the dishwasher. Damage caused by improper installation is not covered by the limited warranty.

**!** WATER HARDNESS OF 3 GRAINS/US GAL - 0.83 IMP GAL -5.3mg/L or LESS.

**!** INSTALL A 1/2" OR LARGER SHUT-OFF VALVE IN THE WATER SUPPLY LINE AS CLOSE TO THE DISHWASHER AS POSSIBLE FOR SERVICING.


**!** WATER SUPPLY CONNECTION IS LOCATED AT THE BASE OF THE DISHWASHER.

**!** CONNECT A 1/2" NPT DRAIN LINE TO THE MECHANICAL DWT DEVICE (Fig. 7).



Fig. 7 - Mechanical DWT Valve

## VENTILATION - VENT HOOD FAN CONTROL

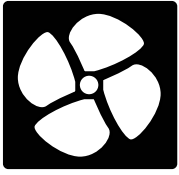

Standard model installations using an approved vent hood may require a vent fan signal. This signal is supplied by the dishwasher control circuit. A qualified installer must connect a signal circuit to the fuse holder and a common neutral terminal provided. See Fig. 8.



**CAUTION:** To prevent damage to the dishwasher do not connect the vent fan motor to Line Power 120VAC, 1.0 Amp fused connection terminals. Damage to any component caused by improper installation is not covered by the limited warranty.

The fused 120VAC Line Power only supplies an external vent fan contactor (supplied by others), and is limited to 1.0 AMP maximum load. The 120VAC is powered whenever main power is on.


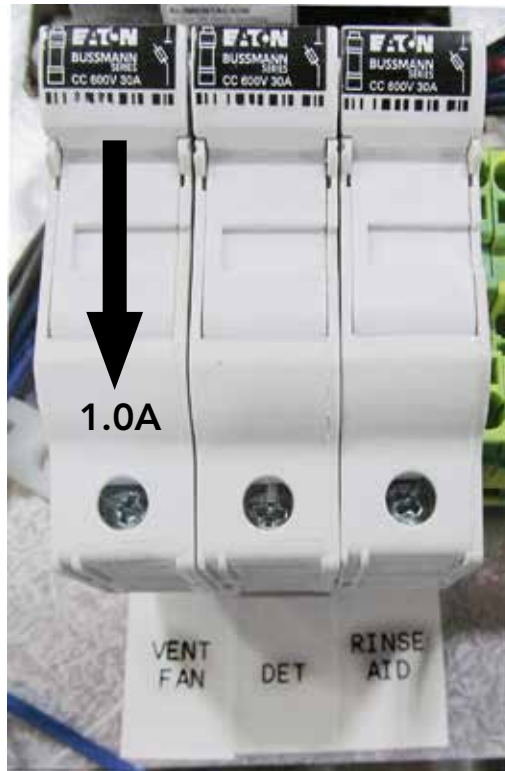


Fig. 8 - Connection is located inside the top control cabinet.

## VENTILATION - PANT LEG DUCT SETTING

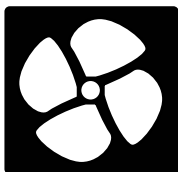

**!** LOAD END 200 CFM @ 1/4"SP/71 L/SEC UNLOAD END 400 CFM @ 1/4" SP/189 L/SEC.

**!** MINIMUM OF SIX KITCHEN AIR CHANGES PER HOUR RECOMMENDED.

**!** TWO 4' X 16" VENT STACKS WITH ADJUSTABLE DAMPERS ARE SUPPLIED WITH THE MACHINE.



**NOTE:**

Loosen the wing-nut holding the damper handle and turn it to open or close the damper to adjust the steam exiting the machine.

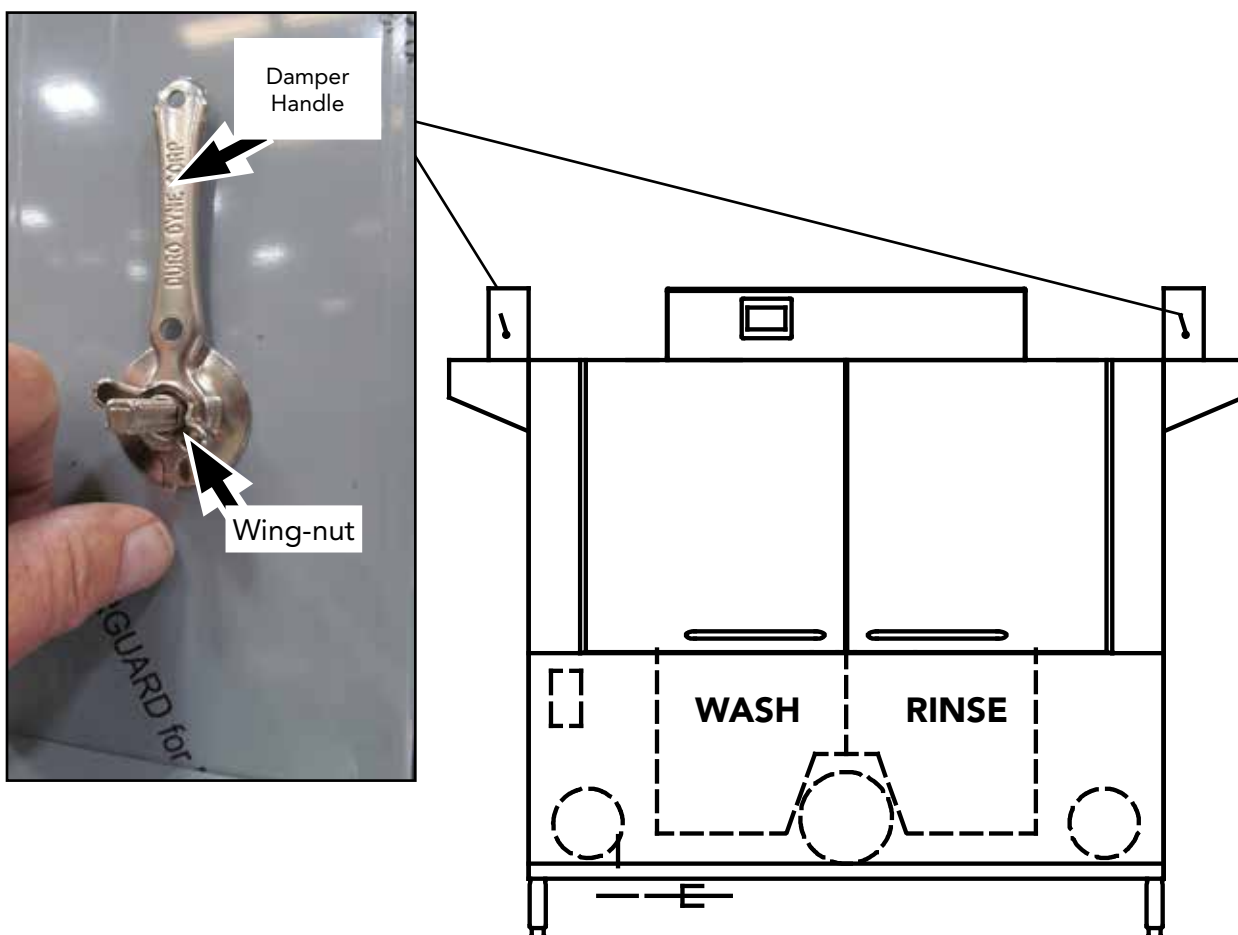


Fig. 9 - Ducts

## DETERGENT DISPENSER CONNECTION



- ❗ WASH TANK CAPACITY IS 17 US GAL./14.2 IMP. GAL/64.4 L.
- ❗ USE A NON-CHLORINATED COMMERCIAL GRADE DETERGENT.
- ❗ A 7/8" DIAMETER HOLE FOR DETERGENT SENSOR PROVIDED IN SIDE OF WASH TANK SIDE. INJECTION POINT BY SUPPLIED OTHERS.
- ❗ FUSED 120VAC 0.5 AMP MAX LOAD DETERGENT SIGNAL CONNECTION IS PROVIDED INSIDE THE CONTROL CABINET.
- ❗ THE DETERGENT SIGNAL IS ENABLED THROUGHOUT THE WASH CYCLE.

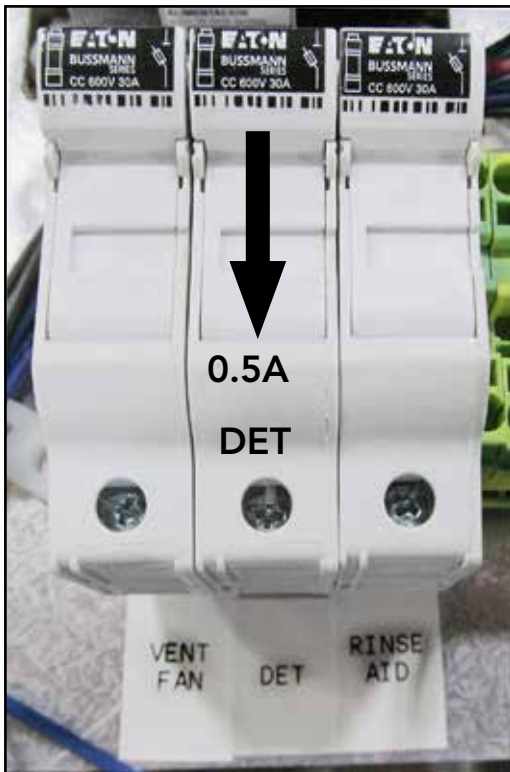


Fig. 10 -  
Connection is located inside the top control cabinet.



Fig. 11 -  
Detergent Sensor provided in side of wash tank

# RINSE-AID DISPENSER CONNECTION



**!** RINSE = 0.29 US GAL/RACK, 0.24 IMP. GAL/RACK, 3.78 L/RACK

**!** 1/8" NPT PIPE PLUG PROVIDED IN FINAL RINSE PIPING.

**!** FUSED 120VAC 0.5 AMP MAX LOAD RINSE AID SIGNAL CONNECTION IS PROVIDED INSIDE THE CONTROL CABINET.

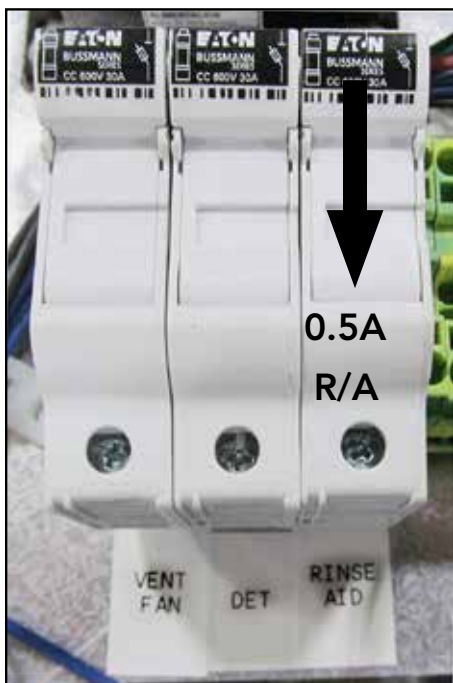


Fig. 12 - Rinse Aid Connection



Fig. 13 - Rinse Aid Injection Point

## ELECTRICAL CONNECTION



The installation of the dishwasher must comply with all local electrical, plumbing, health and safety codes or in the absence of local codes, installed in accordance with the applicable requirements in the National Electrical Code, NFPA 70, Canadian Electrical Code (CEC), Part 1, CSA C22.1; and the Standard for Ventilation Control and Fire Protection of Commercial Cooking Operations, NFPA 96.



**WARNING:**

There may be more than one power source connected to the machine. Make sure all power sources are disconnected, locked and tagged out before working on the circuit.

Electrocution may occur when working on energized circuits. Disconnect power at the main breaker or service disconnect switch, then lock out and tag the circuit to indicate that work is being performed.

**! ATTENTION INSTALLER !**

All machines are shipped from the factory as a 1-POINT connection. The BOOSTER is wired for 21kW operation.

**IT IS THE INSTALLER'S RESPONSIBILITY TO CHANGE THE CONNECTION TO 2-POINT AND/OR THE BOOSTER TO 12kW IF REQUIRED.**

# Electrical Connection - Changing 1-Point to 2-Point Electrical Connection

**!** COMPARE THE ELECTRICAL SUPPLY WITH THE MACHINE ELECTRICAL CONNECTION DATA PLATE BEFORE CONNECTING THE POWER TO THE MACHINE.  
THE DATA PLATE IS ADJACENT TO THE INPUT TERMINAL BLOCKS.

**!** 1-POINT CONNECTION MACHINES HAVE JUMPERS BETWEEN THE INPUT BLOCKS.

**!** REMOVE THE JUMPERS FOR 2-POINT ELECTRICAL CONNECTION.

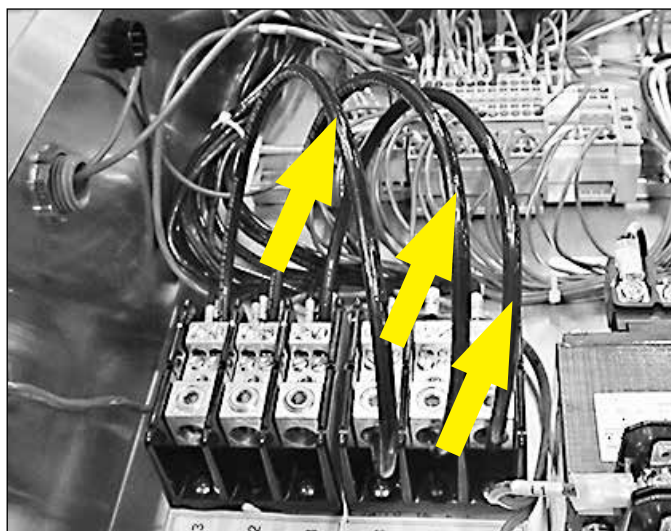
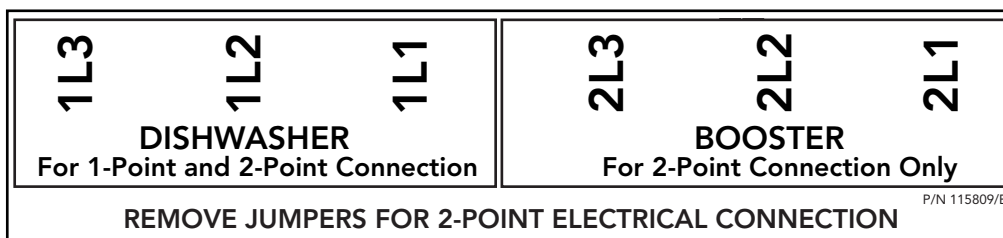


Fig.14-  
1-point connection jumpers.

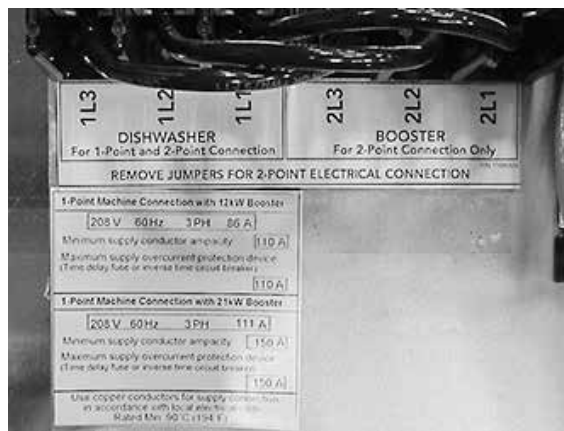


Fig.15 -  
1-point connection data plate



## Electrical Connections - Changing 1-Point to 2-Point Electrical Connection

To convert a 1-point connection to a 2-point connection.

1. Open the control cabinet and remove the jumpers, (Fig. 14), between 'Dishwasher' terminal block and the 'Booster' terminal block.
2. Cover the existing 1-point connection data plate, (Fig. 15), with the 2-point connection data plate, (Fig. 16), stowed in the plastic bag, (Fig. 17), next to the input terminal block.
3. Connect the incoming power according to the customer's requirements.
4. Conversion is complete.

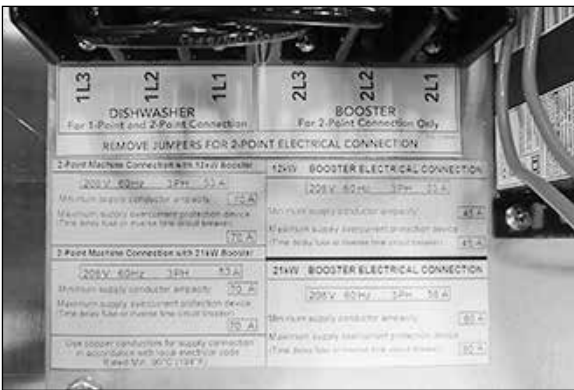


Fig.16 -  
2-point connection data plates



Fig.17 -  
The 2-point data plate is located in a plastic bag next to the terminal block.



# Electrical Connection - 21 kW to 12kW Booster Conversion




## ATTENTION

The booster is shipped from the factory wired for 21kW operation. For 12kW operation, the booster must be reconnected as shown below.

## 21kW to 12kW Booster Conversion


- 1 Disconnect all power from the unit.
- 2 Remove the booster cover.
- 3 Remove the jumper wires from the 9kW element.
- 4 Connect a jumper wire between 73 on the 6kW elements.
- 5 Remove the power wire #74 from the 9kW element.
- 6 Reconnect the power wire #74 to the #74 strap on the left 6kW element.
- 7 Double-check all wiring.
- 8 Replace the booster cover.
- 9 Conversion is complete.

### 21kW Booster

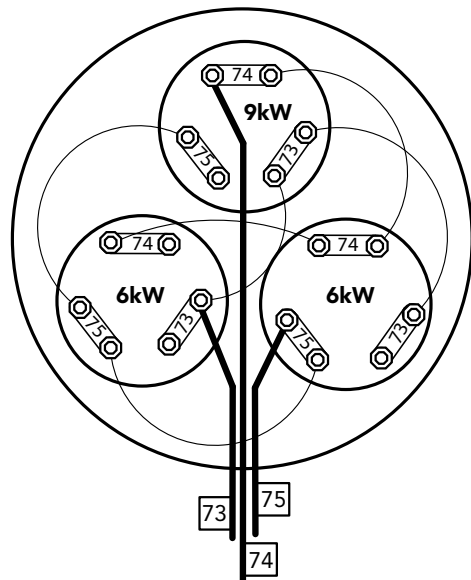

#73 and #75 FROM SSR  
#74 DIRECT FROM CABINET

### 12kW Booster

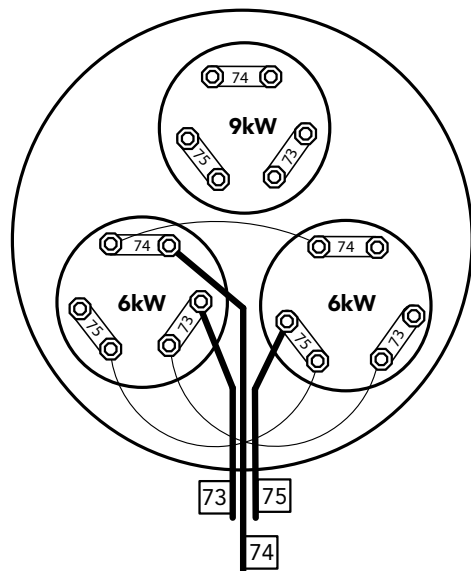

#73 and #75 FROM SSR  
#74 DIRECT FROM CABINET

## CHECK MOTOR ROTATION




All motors are phased the same at the factory. Reverse L1 and L2 at the main terminal block to change motor direction of all motors.

1. Fig. 18 shows the rotation arrow label on the rear pump housing.



*Fig. 18*

2. Fig. 19 shows the drive motor rotation label on the drive plate.

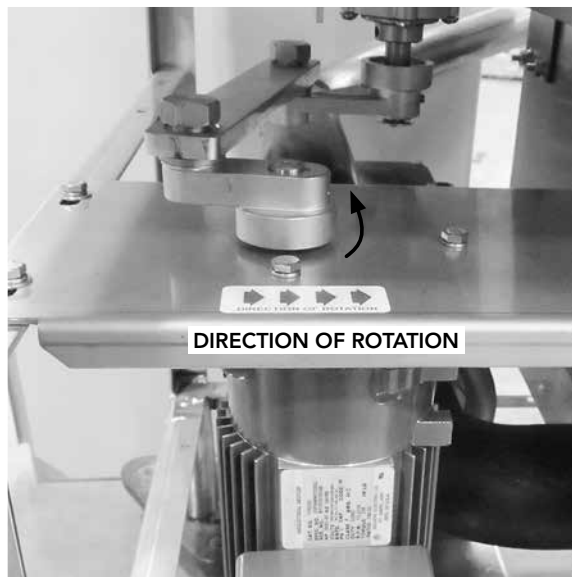

*Fig. 19*